



Spare Parts Catalogue

Pfaff 34

PFAFF INDUSTRIEMASCHINEN GMBH KAISERSLAUTERN

Foreword

All component parts are grouped together as they are arranged in the sewing machine.

All underlined part numbers signify assemblies which are made up of several component parts.

An asterisk (*) preceding the part number indicates that the part in question is not interchangeable with a similar part used on previous machines which is listed in Section 8. If the part to be replaced on a previous machine is listed in Section 8 under its old part number, order a replacement part under this number. If not, order the latest version of this part under its current number.

Part number changes will be published on correction sheets and disseminated with our circulars.

Subject to alterations in design.

December 1970

**PFAFF INDUSTRIEMASCHINEN GMBH
KAISERSLAUTERN**

UNITY SEWING SUPPLY CO.
824 E. 8th St.

Los Angeles, CA 90021

Contents


	Page
1. Front parts, Pfaff 34-6/01; -6/02	5
2. Arm parts, Pfaff 34-6/01; -6/02	9
3. Bedplate parts, Pfaff 34-6/01; -6/02	13
4.1. Lifting lever parts, Pfaff 34-6/01; -6/02	17
4.1. Accessory parts, Pfaff 34-6/01; -6/02	17
4.2. Accessory parts, Pfaff 34-6/01; -6/02	21
4.3. Accessory parts, Pfaff 34-6/01; -6/02	25
5. Complementary parts, Pfaff 34-6 N10	29
5. Complementary parts, Pfaff 34-4	29
6. Complementary parts, Pfaff 34-5	33
6. Complementary parts, Pfaff 34-5-171	33
7. Complementary parts, Pfaff 34-4-92	37
7. Complementary parts, Pfaff 34-5-92	37
8. Parts of previous machines, Pfaff 34	41
8. Parts of previous machines, Pfaff 34-31	41
Numerical Index	45

UNITY SEWING SUPPLY CO.
824 E. 8th St.
Los Angeles, CA 90021

1.

UNITY SEWING SUPPLY CO.
824 E. 8th St.
Los Angeles, CA 90021

Front Parts

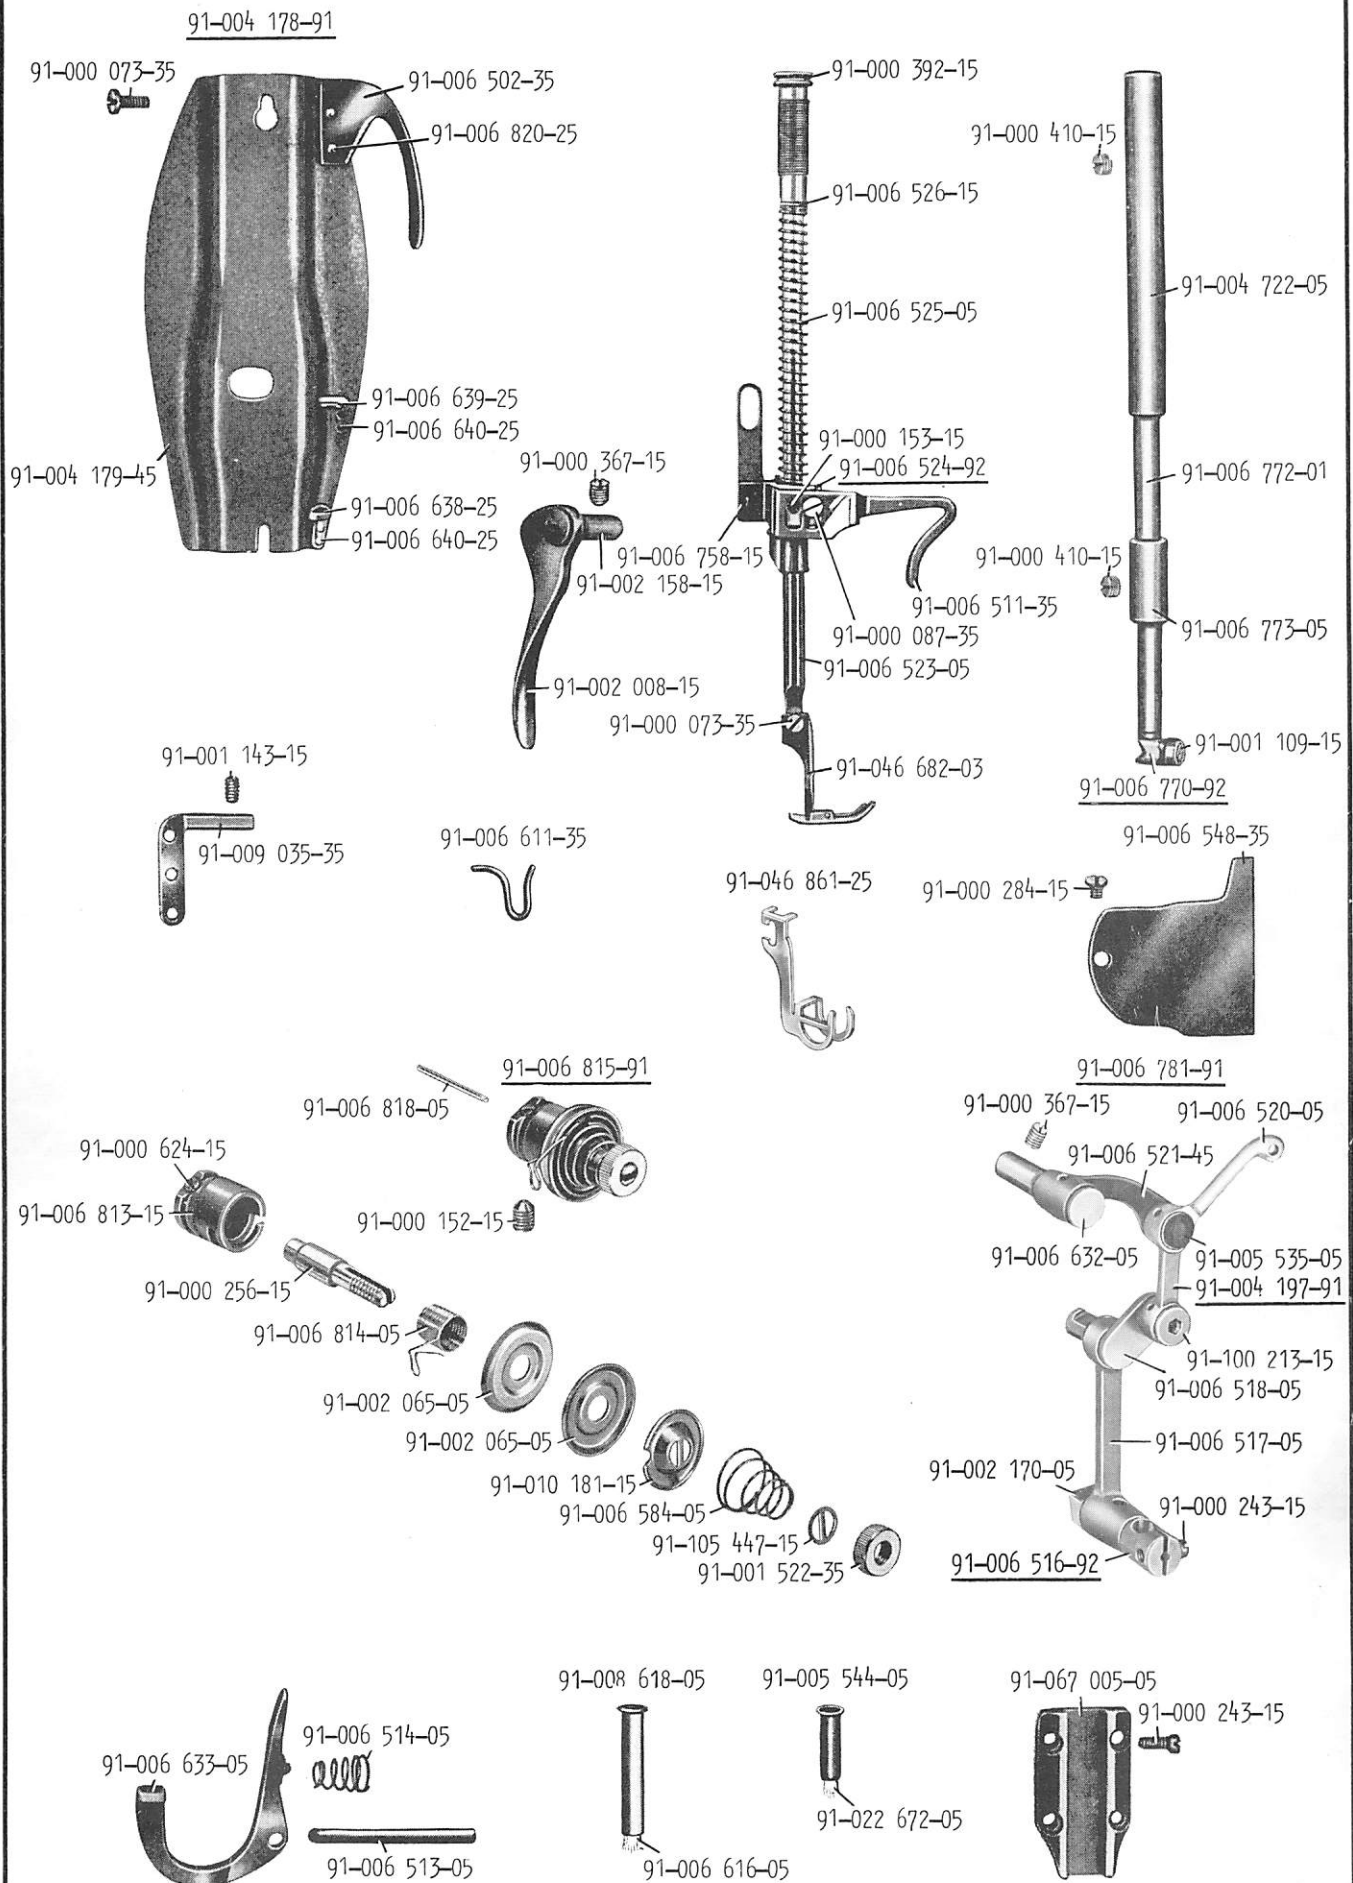

91-000 073-35	Fillister-head screw for Nos.91-004 178-91; 91-046 682-03	91-006 517-05	Needle bar connecting link
91-000 087-35	Fillister-head screw for No.91-006 511-35	91-006 518-05	Take-up crank
91-000 152-15	Pin, threaded, for No.91-006 815-91	91-006 520-05	Take-up lever
91-000 153-15	Pin, threaded, for No.91-006 524-92	91-006 521-45	Take-up lever link
91-000 243-15	Pan-head screw for Nos.91-006 516-92; 91-067 005-05	91-006 523-05	Presser bar
91-000 256-15	Tension stud	<u>91-006 524-92</u>	Presser bar guide collar, w/ pin, threaded, No.91-000 153-15
91-000 284-15	Fillister-head screw for No.91-006 548-35	91-006 525-05	Presser bar spring, outer (Model A & B), No.91-010 633-05 presser bar spring, (Model C), outer, not ill.
91-000 367-15	Pin, threaded for Nos.91-002 158-15; 91-006 632-05	91-006 526-15	Washer for No.91-006 525-05
91-000 392-15	Pressure regulating thumb screw	91-006 548-35	Cover, front
91-000 410-15	Pin, threaded, for Nos.91-004 722-05; 91-006 773-05	91-006 584-05	Tension spring (Model A & B) No.91-004 188-05 tension spring (Model C), not ill.
91-000 624-15	Pin, threaded, for No.91-000 256-15	91-006 611-35	Thread guide, upper
91-001 109-15	Pin, threaded, for No.91-006 770-92	91-006 616-05	Oil wick for No.91-008 618-05
91-001 143-15	Pin, threaded, for No.91-009 035-35	91-006 632-05	Hinge stud for No.91-006 521-45
91-001 522-35	Knurled nut for No.91-000 256-15	91-006 633-05	Tension release lever
91-002 008-15	Presser bar lifter	91-006 638-25	Thread guide, lower, for No.91-004 178-91
91-002 065-05	Tension disc	91-006 639-25	Thread guide, center, for No.91-004 178-91
91-002 158-15	Hinge stud for No.91-002 008-15	91-006 640-25	Rivet for Nos.91-006 638-25; 91-006 639-25
91-002 170-05	Slide block for No.91-006 516-92	91-006 758-15	Presser bar lifting bracket
<u>91-004 178-91</u>	Face plate, complete, consisting of Nos.91-004 179-45; 91-006 502-35; 91-006 638-25; 91-006 639-25; 91-006 640-25; 91-006 820-25	<u>91-006 770-92</u>	Needle holder, w/ pin, threaded, No.91-001 109-15
91-004 179-45	Face plate	91-006 772-01	Needle bar (Model A & B, subcl. -6/01; -6/02) for needle size 60 - 110, identified by 1 groove No.91-006 775-01 Needle bar (Model C, subcl. -6/02), not ill. for needle size 120 - 140, identified by 2 grooves No.91-006 779-01 Needle bar (Model C, subcl. -6/01), not ill. for needle size 150 - 160, identified by 3 grooves
<u>91-004 197-91</u>	Take-up lever link, complete, consisting of Nos.91-005 535-05; 91-006 520-05; 91-006 521-45	91-006 773-05	Needle bar bushing, lower
91-004 722-05	Needle bar bushing, upper	<u>91-006 781-91</u>	Take-up lever, complete, consisting of Nos.91-002 170-05; 91-004 197-91; 91-006 516-92; 91-006 517-05; 91-006 518-05; 91-006 632-05; 91-100 213-15
91-005 535-05	Hinge pin for Nos.91-006 520-05; 91-006 521-45		
91-005 544-05	Oil tube (25 mm long) for take-up lever		
91-006 502-35	Take-up lever guard for No.91-004 178-91		
91-006 511-35	Thread regulator		
91-006 513-05	Hinge stud for No.91-006 633-05		
91-006 514-05	Pressure spring for No.91-006 633-05		
<u>91-006 516-92</u>	Needle bar connecting stud, w/ pan-head screw No.91-000 243-15		

91-006 813-15 Thread check spring regulator for No.91-006 815-91

91-006 814-05 Thread check spring (Model A & B)
No.91-004 705-05 thread check spring (Model C),
not ill.

91-006 815-91 Thread tension, complete, (Model A & B)
consisting of Nos.91-000 256-15;
91-000 624-15; 91-001 522-35;
91-002 065-05; 91-006 584-05;
91-006 813-15; 91-006 814-05;
91-006 818-05; 91-010 181-15;
91-105 447-15
No.91-004 187-91 thread tension complete,
(Model C), not ill.
Same components as No.91-006 815-91,
but incorporating
No.91-004 188-05 tension spring
No.91-004 705-05 thread check spring

91-006 818-05 Tension release plunger

91-006 820-25 Rivet for No.91-006 502-35

91-008 618-05 Oil tube (37 mm long) for take-up lever link

91-009 035-35 Thread retainer

91-010 181-15 Tension release washer

91-022 672-05 Oil wick for No.91-005 544-05

91-046 682-03 x Model
Presser foot

91-046 861-25 Finger guard


91-067 005-05 Position bracket for No.91-002 170-05

*91-100 213-15 Fitting screw for No.91-006 518-05

91-105 447-15 Washer for No.91-006 584-05

2.

Arm Parts

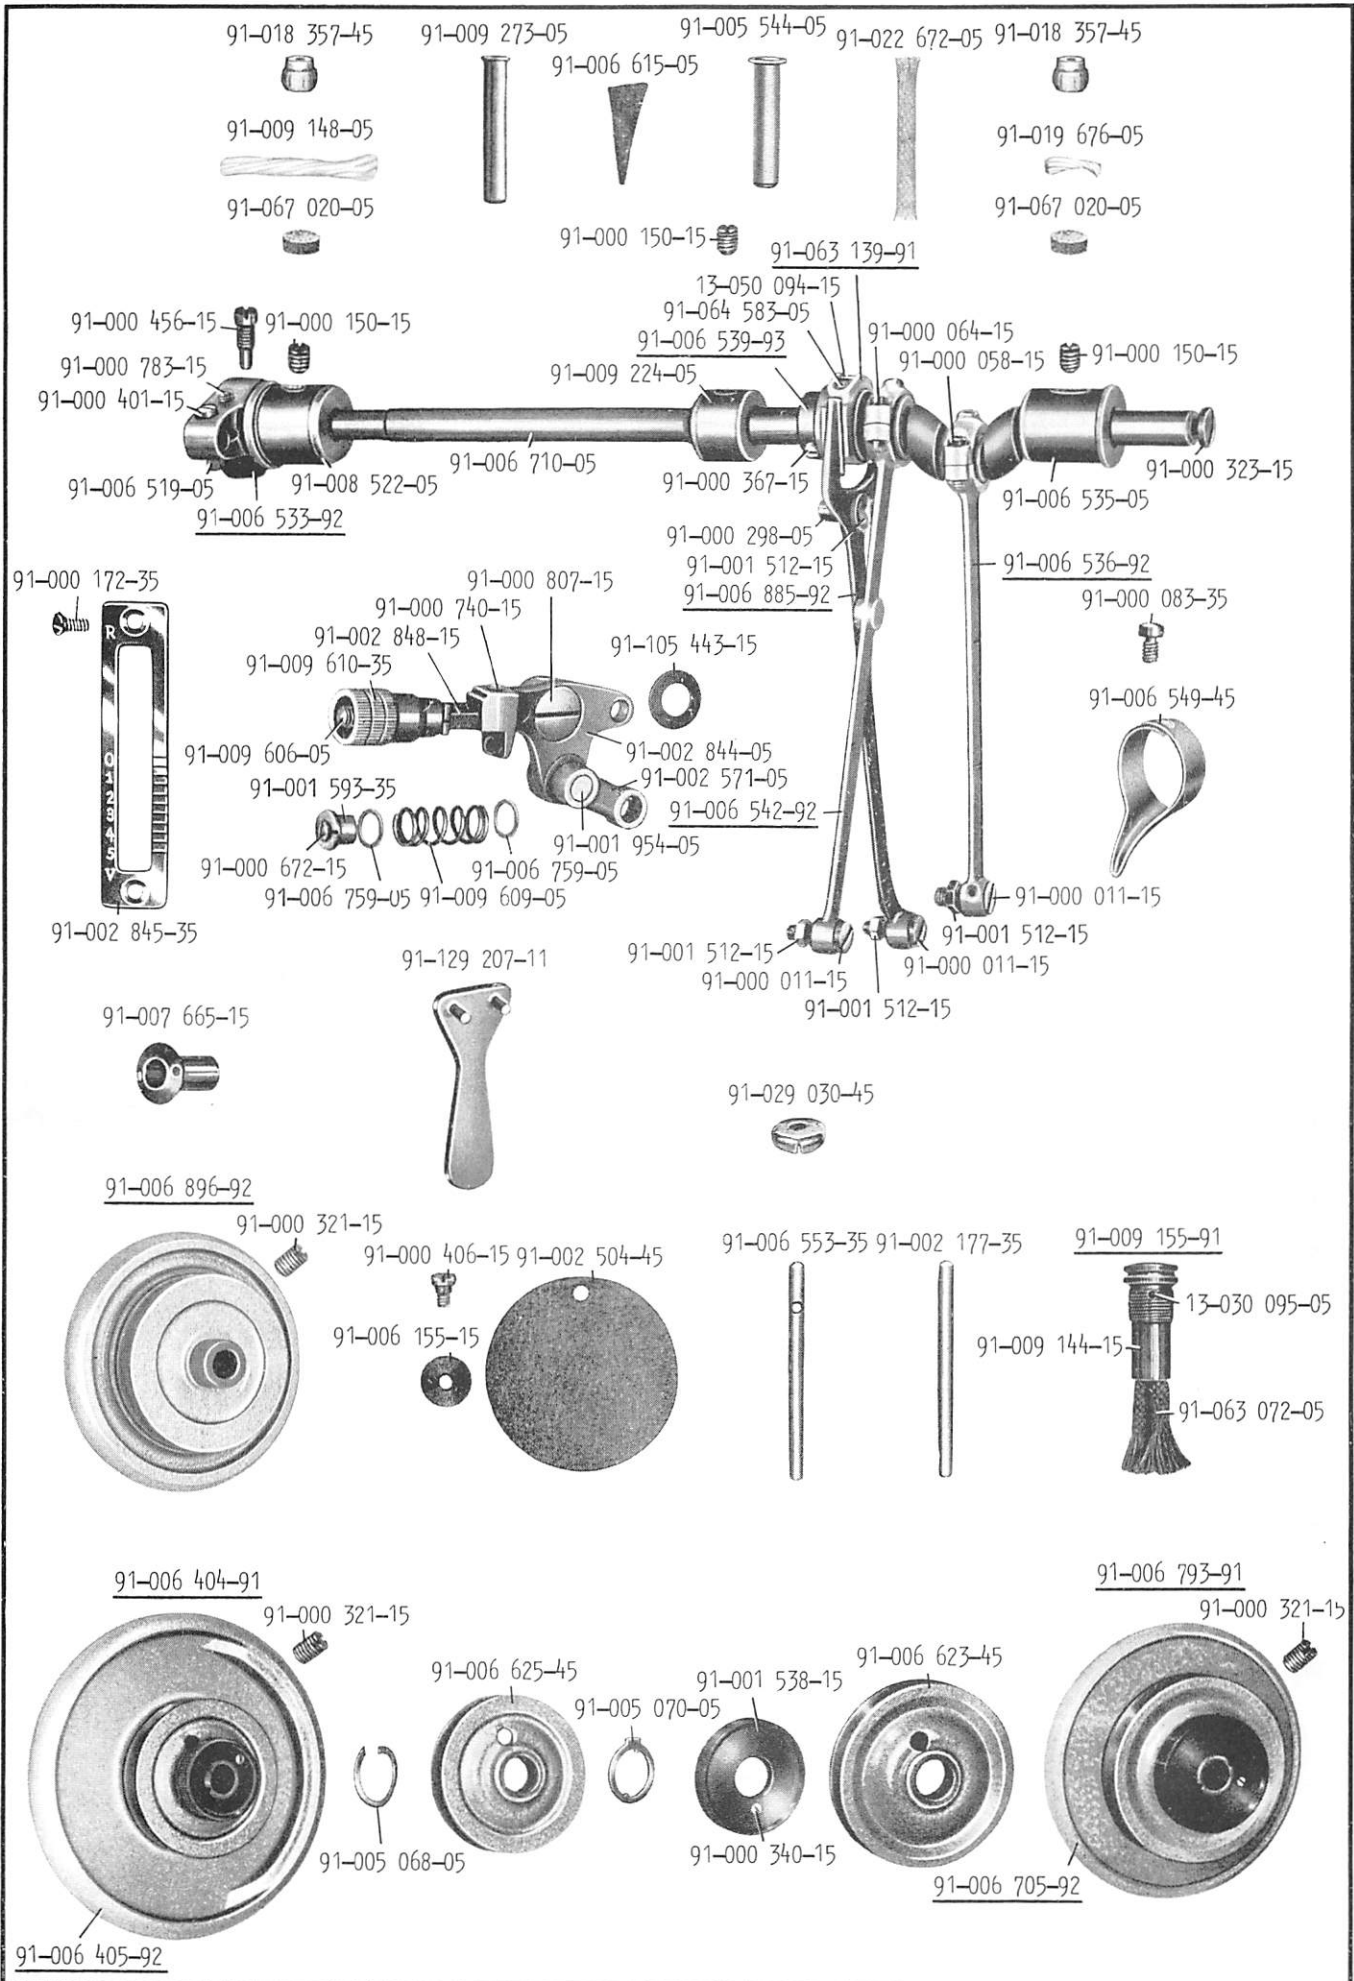

13-030 095-05	Cylindrical pin 2H8x10 DIN 7-9 S 20 K, for No.91-009 155-91	91-005 070-05	Balance wheel friction washer for Nos.91-006 623-45; 91-006 625-45
13-050 094-15	Split bushing 2x10 DIN 1481, for No.91-063 139-91	91-005 544-05	Oil tube (25 mm long) for No.91-063 139-91
91-000 011-15	Fillister-head screw for Nos.91-006 536-92; 91-006 542-92; 91-006 885-92	*91-006 155-15	Spring washer for No.91-000 406-15
91-000 058-15	Fillister-head screw for No.91-006 536-92	<u>91-006 404-91</u>	Balance wheel, complete (foot drive), consisting of Nos.91-000 340-15; 91-001 538-15; 91-005 068-05; 91-005 070-05; 91-006 405-92; 91-006 625-45
91-000 064-15	Fillister-head screw for No.91-006 542-92	<u>91-006 405-92</u>	Balance wheel, w/ pin, threaded, No.91-000 321-15, for No.91-006 404-91
91-000 083-35	Fillister-head screw for No.91-006 549-45	91-006 519-05	Split bushing for No.91-006 518-05 (see section 1)
91-000 150-15	Pin, threaded, for Nos.91-006 535-05; 91-008 522-05; 91-009 224-05	<u>91-006 533-92</u>	Needle bar crank, w/ pin, threaded, No.91-000 783-15
91-000 172-35	Oval-head screw for No.91-002 845-35	91-006 535-05	Arm shaft bushing, rear
91-000 298-05	Dog-point screw for No.91-006 885-92	<u>91-006 536-92</u>	Shuttle drive connecting rod, w/ fillister-head screw No.91-000 058-15
91-000 321-15	Pin, threaded, for Nos.91-006 405-92; 91-006 705-92; 91-006 896-92	<u>91-006 539-93</u>	Feed eccentric, w/ pin, threaded, No.91-000 367-15 (Orders should specify number of dots: 1, 2 or 3)
91-000 323-15	Fillister-head screw for No.91-006 710-05	<u>91-006 542-92</u>	Feed lifting connection, w/ fillister-head screw No.91-000 064-15
91-000 340-15	Pan-head screw for No.91-001 538-15	91-006 549-45	Oil cover
91-000 367-15	Pin, threaded, for No.91-006 539-93	91-006 553-35	Thread guide
91-000 401-15	Fillister-head screw for No.91-006 519-05	91-006 615-05	Oil felt for No.91-009 273-05
*91-000 406-15	Fillister-head screw for No.91-002 504-45	91-006 623-45	Pulley for No.91-006 705-92
91-000 456-15	Fillister-head screw for No.91-006 533-92	91-006 625-45	Pulley for No.91-006 405-92
91-000 672-15	Pin, threaded, for No.91-001 593-35	<u>91-006 705-92</u>	Balance wheel, w/ pin, threaded, No.91-000 321-15, for No.91-006 793-91
91-000 740-15	Pin, threaded, for No.91-009 606-05	91-006 710-05	Arm shaft
91-000 783-15	Pin, threaded, for No.91-006 533-92	91-006 759-05	Washer for No.91-009 609-05
91-000 807-15	Fillister-head screw for No.91-002 844-05	<u>91-006 793-91</u>	Balance wheel, complete (power drive, special type) consisting of Nos.91-000 340-15; 91-001 538-15; 91-005 068-05; 91-005 070-05; 91-006 623-45; 91-006 705-92
91-001 512-15	Hexagon nut for Nos.91-000 011-15; 91-000 298-05	<u>91-006 885-92</u>	Feed forked connection, w/ No.91-000 298-05 dog point screw No.91-001 512-15 hexagon nut
91-001 538-15	Stop motion nut for Nos.91-006 623-45; 91-006 625-45	<u>91-006 896-92</u>	Balance wheel (Models A & B, power drive), w/ pin, threaded, No.91-000 321-15 No.91-068 076-92 Balance wheel (Model C, power drive), w/ pin, threaded, No.91-000 321-15, not ill.
91-001 593-35	Slotted nut for No.91-009 606-05		
*91-001 954-05	Cylindrical pin for No.91-002 844-05		
91-002 177-35	Spool pin		
91-002 504-45	Arm cover, rear		
91-002 571-05	Feed regulator link for No.91-002 844-05		
91-002 844-05	Feed regulator		
91-002 845-35	Feed regulator index plate		
91-002 848-15	Feed regulator lever stud guide		
91-005 068-05	Spring washer for Nos.91-006 623-45; 91-006 625-45		

*See parts of previous versions, page 8.

91-007 665-15 Lock nut (special type) for Nos.91-009 606-05;
91-009 610-35
(supersedes Nos.91-000 672-15; 91-001 593-35;
91-006 759-05; 91-009 609-05)

*91-008 522-05 Arm shaft bushing, front

91-009 144-15 Oil packing screw, for No.91-009 155-91

91-009 148-05 Oil wick (60 mm long) for front oiler
No.91-018 357-45

91-009 155-91 Oil cup, complete,
consisting of Nos.13-030 095-05; 91-009 144-15;
91-063 072-05

91-009 224-05 Arm shaft bushing, center

91-009 273-05 Oil tube (33 mm long) for No.91-009 224-05

91-009 606-05 Feed regulator lever stud

91-009 609-05 Retaining spring for No.91-009 610-35

91-009 610-35 Feed regulator lever stud

*91-018 357-45 Oil cup for Nos.91-006 535-05; 91-008 522-05

91-019 676-05 Oil wick (20 mm long) for oil cup, rear,
No.91-018 357-45

91-022 672-05 Oil wick (40 mm long) for No.91-005 544-05

91-029 030-45 Spool pin washer for No.91-002 177-35

91-063 072-05 Oil wick (50 mm long) for No.91-009 155-91

91-063 139-91 Feed driving eccentric sleeve, w/
split bushing No.13-050 094-15

91-064 583-05 Oil felt for No.91-063 139-91

91-067 020-05 Oil felt for Nos.91-006 535-05; 91-008 522-05


91-105 443-15 Spring washer for No.91-000 807-15

91-129 207-11 Pin spanner (special-type) for No.91-007 665-15

91-006 801-45 Arm (not ill.)

3.

Bedplate Parts

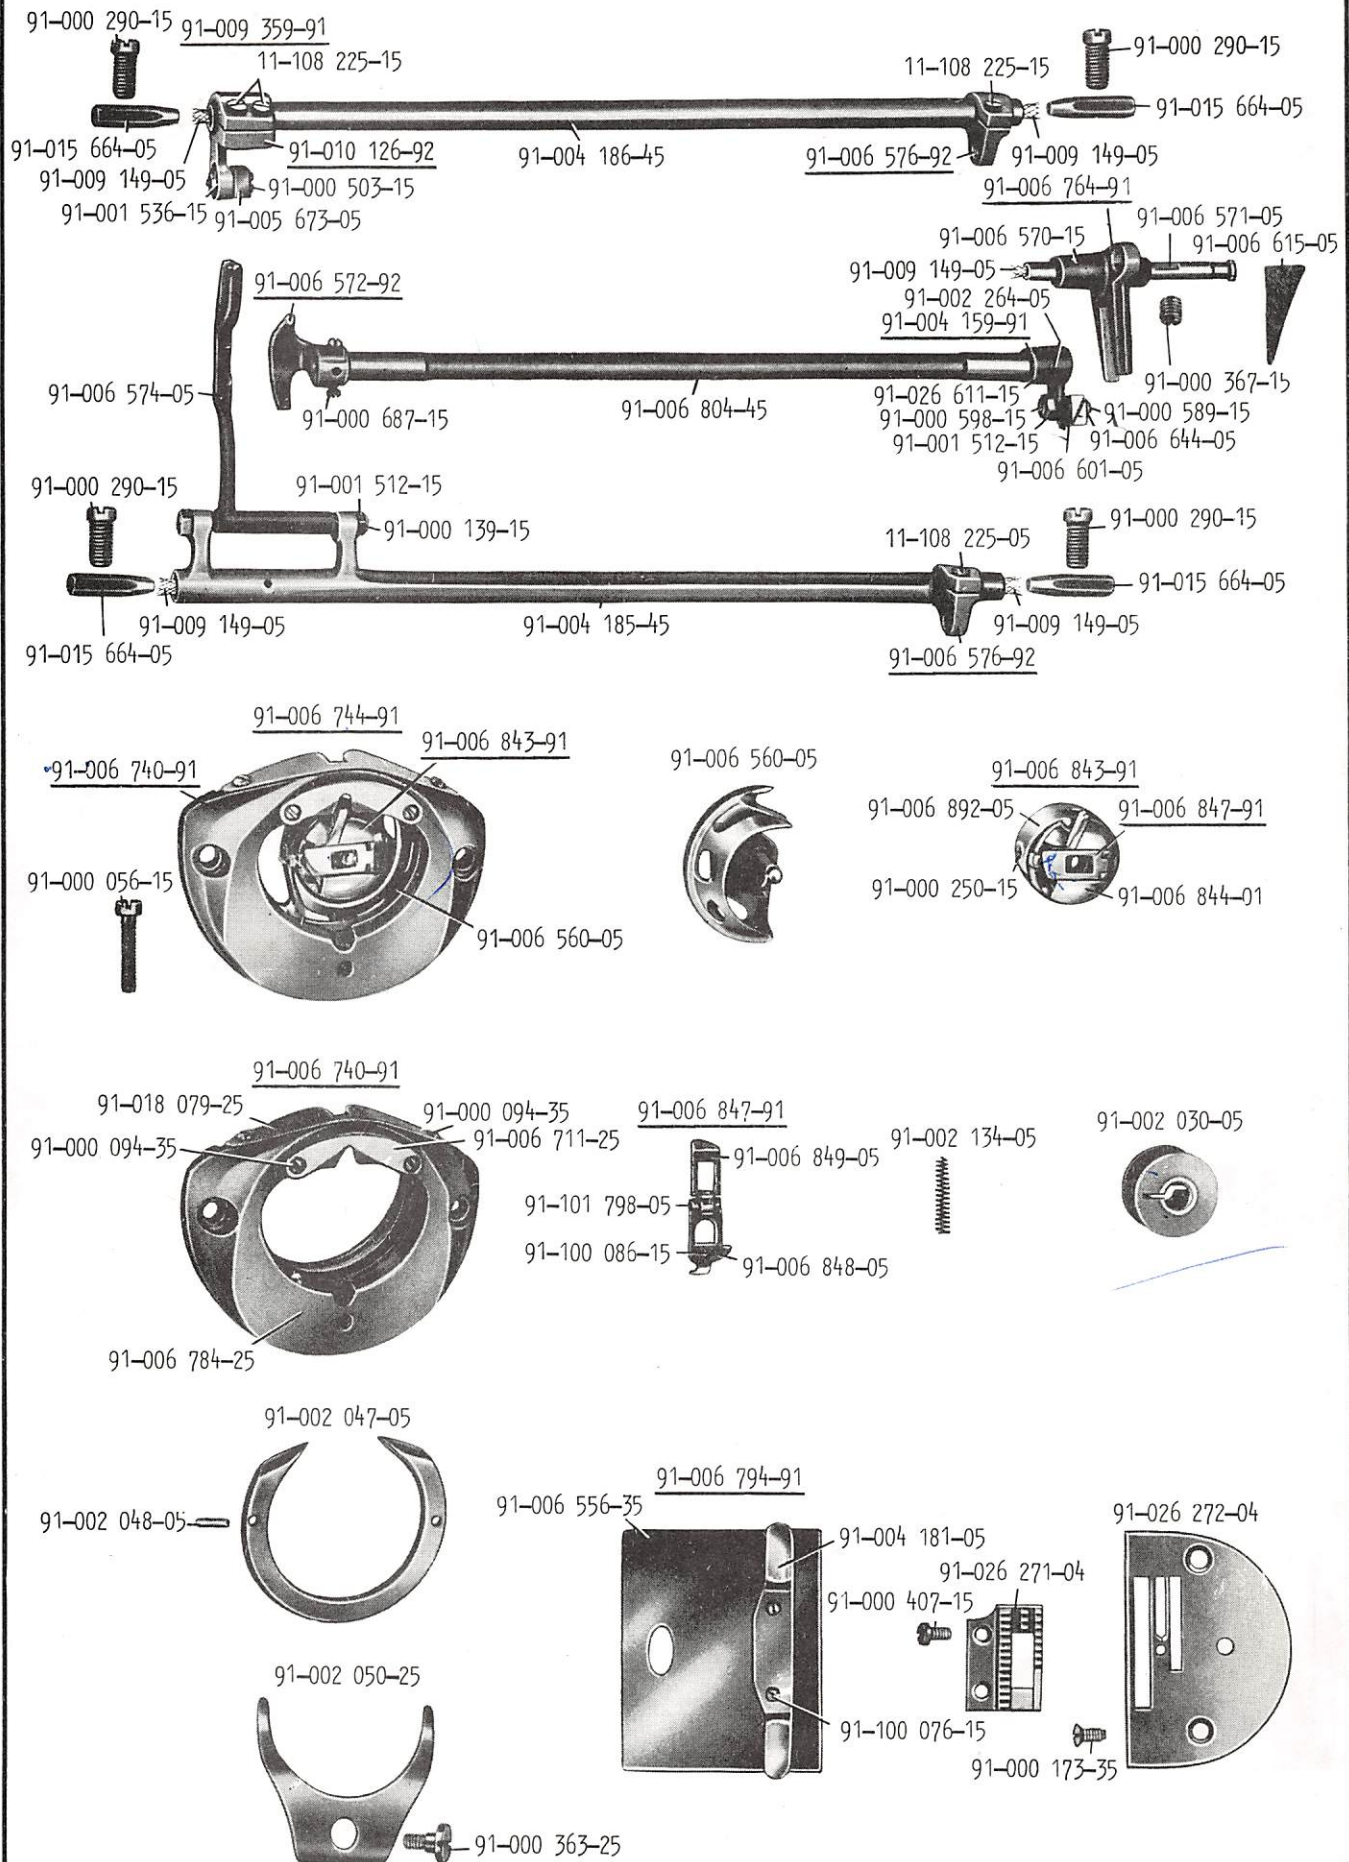

*11-108 225-15	Pan-head screw A M 5x10 DIN 84-8.8, for Nos.91-006 576-92; 91-010 126-92	91-006 571-05	Oscillating rock shaft hinge pin
91-000 056-15	Fillister-head screw for No.91-006 744-91	<u>91-006 572-92</u>	Shuttle driver w/ fillister-head screw No.91-000 687-15
91-000 094-35	Round-head screw for Nos.91-006 711-25; 91-018 079-25	91-006 574-05	Feed bar
91-000 139-15	Pin, threaded, for No.91-006 574-05	<u>91-006 576-92</u>	Feed lifting shaft crank, rear, and feed rock shaft crank, rear w/ pan-head screw No.11-108 225-15
91-000 173-35	Flat-head screw for No.91-026 272-04	91-006 601-05	Slide block for No.91-004 159-91 ✓
91-000 250-15	Fillister-head screw for No.91-006 892-05	91-006 615-05	Oil pad for No.91-006 570-15
91-000 290-15	Fillister-head screw for No.91-015 664-05	91-006 644-05	Flange for No.91-006 601-05 ✓
91-000 363-25	Fillister-head screw for No.91-002 050-25	91-006 711-25	Bobbin case stop
91-000 367-15	Pin, threaded, for No.91-006 571-05	<u>91-006 740-91</u>	Shuttle race (Model B), complete, consisting of Nos.91-000 094-35; 91-000 363-25; 91-002 047-05; 91-002 048-05; 91-002 050-25; 91-006 711-25; 91-006 784-25; 91-018 079-25
91-000 407-15	Fillister-head screw for No.91-026 271-04	No.91-006 415-91	shuttle race (Model C), complete, not ill. Same components as No.91-006 740-91, but incorporating No.91-006 416-25
91-000 503-15	Fillister-head screw for No.91-005 673-05	No.91-006 891-91	shuttle race (Model A), complete, not ill. Same components as No.91-006 740-91, but incorporating No.91-006 785-25
91-000 589-15	Fillister-head screw for No.91-006 601-05 ✓		
91-000 598-15	Slide block stud for No.91-006 601-05 ✓		
91-000 687-15	Fillister-head screw for No.91-006 572-92		
91-001 512-15	Hexagon nut for Nos.91-000 139-15; ✓ 91-000 598-15		
91-001 536-15	Hexagon nut for No.91-000 503-15		
91-002 030-05	Bobbin		
91-002 047-05	Shuttle race back		
91-002 048-05	Position pin for No.91-002 047-05		
91-002 050-25	Spring for shuttle race back	<u>91-006 744-91</u>	Shuttle race, with shuttle and bobbin case (Model B), complete, consisting of Nos.91-006 560-05; 91-006 740-91; 91-006 843-91
91-002 134-05	Pressure spring for No.91-006 847-91	No.91-006 746-91	shuttle race, with shuttle and bobbin case (Model A), complete, not ill. Same components as No.91-006 744-91, but incorporating No.91-006 891-91
91-002 264-05	Taper pin for No.91-004 159-91	No.91-006 414-91	shuttle race, with shuttle and bobbin case (Model C), complete, not ill. Same components as No.91-006 744-91, but incorporating No.91-006 415-91
<u>91-004 159-91</u>	Shuttle driver shaft crank, complete, consisting of Nos.91-000 589-15; 91-000 598-15; 91-001 512-15; 91-006 601-05; 91-006 644-05; 91-026 611-15		shuttle race, No.91-006 694-05 shuttle
91-004 181-05	Bed slide spring for No.91-006 556-35		
91-004 185-45	Feed rock shaft		
91-004 186-45	Feed lifting shaft		
91-005 673-05	Slide block for No.91-009 359-91		
91-006 556-35	Bed slide		
91-006 560-05	Shuttle (Models A & B) No.91-006 694-05 Shuttle (Model C), not ill.	<u>91-006 764-91</u>	Oscillating rock shaft, complete, consisting of Nos.91-006 570-15; 91-006 571-05
91-006 570-15	Oscillating rock shaft		

*See parts of previous versions, page 8.

91-006 784-25 Shuttle race (Models B & C)
 No.91-006 785-25 shuttle race (Model A), not ill.

91-006 794-91 Bed slide, complete,
 consisting of Nos.91-004 181-05; 91-006 556-35;
 91-100 076-15

91-006 804-45 Shuttle driver shaft

91-006 843-91 Bobbin case, complete,
 consisting of Nos.91-000 250-15; 91-002 134-05;
 91-006 844-01; 91-006 847-91; 91-006 892-05

91-006 844-01 Bobbin case

91-006 847-91 Bobbin case latch, complete,
 consisting of Nos.91-006 848-05; 91-006 849-05;
 91-100 086-15; 91-101 798-05

91-006 848-05 Bobbin case latch slide

91-006 849-05 Bobbin case latch lever

91-006 892-05 Tension spring for No.91-006 843-91

91-009 149-05 Oil wick (150 mm long),
 for Nos.91-004 185-45; 91-004 186-45; 91-006 571-05

91-009 359-91 Feed lifting shaft crank, front, complete,
 consisting of Nos.91-000 503-15; 91-001 536-15;
 91-005 673-05; 91-010 126-92

91-010 126-92 Feed lifting shaft crank, front, w/
 pan-head screw No.11-108 225-15

*91-015 664-05 Center stud for Nos.91-004 185-45; 91-004 186-45

91-018 079-25 Shuttle race cap (Models A & B)
 No.91-006 416-25 shuttle race cap
 (Model C), not ill.

91-026 271-04 x Model
 Feed dog, (subcl. -6/02)
 for No.91-026 272-04
 No.91-026 095-04 x Model
 feed dog (subcl. -6/01), not ill.,
 for No.91-026 096-04

91-026 272-04 x Model
 Needle plate (subcl. -6/02)
 No.91-026 096-04 x Model
 needle plate (subcl. -6/01), not ill.

91-026 611-15 Shuttle driver shaft crank

91-100 076-15 Pan-head screw for No.91-004 181-05

91-100 086-15 Pan-head screw for No.91-006 847-91

91-101 798-05 Cylindrical pin for No.91-006 847-91



91-006 803-45 Bed plate (not ill.)

11-130 548-15 Flat-head screw M 12x35 DIN 912-8.8, not ill.,
 for No.91-006 803-45


13-060 400-05 Notched pin 6x32 DIN 1471, for No.91-006 803-45

4.1.

Lifting Lever Parts Accessory Parts

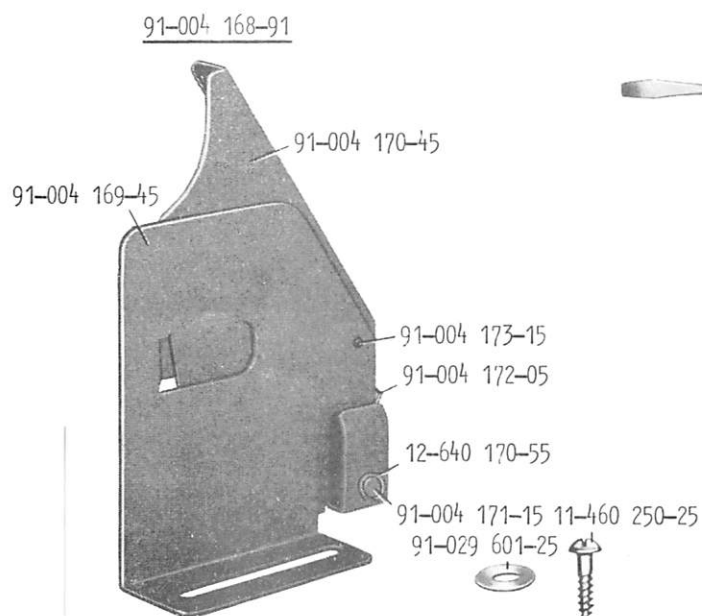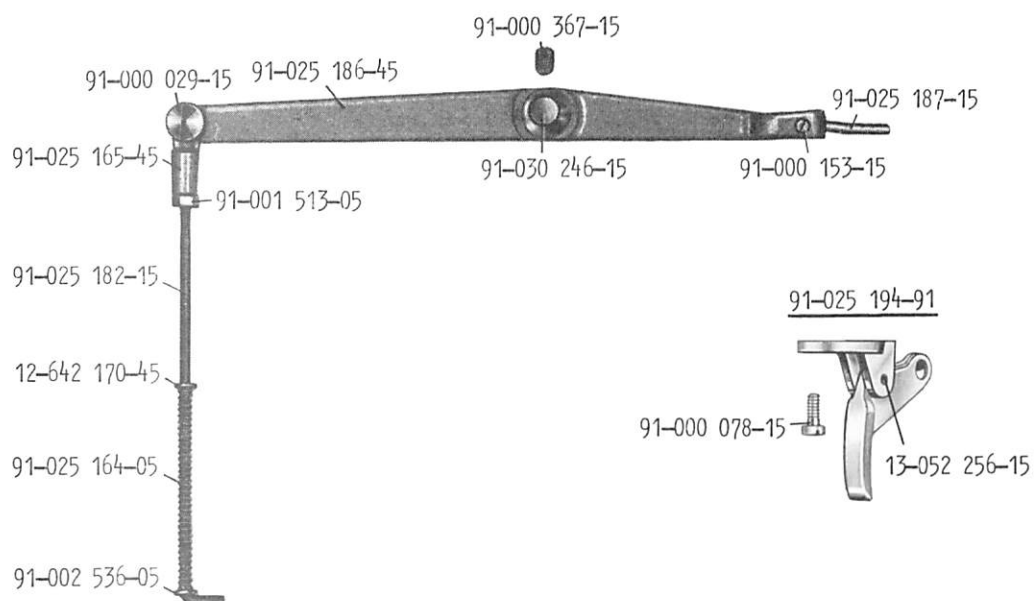

91-029 007-91

 

91-029 480-91



91-029 946-91




99-129 580-93




91-029 831-91




91-026 414-93

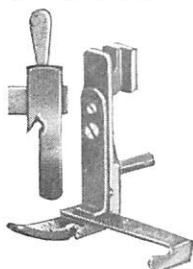


91-026 242-93

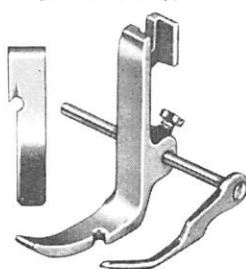

91-000 112-25

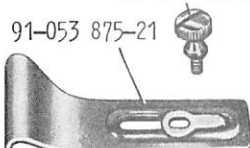

91-029 833-45

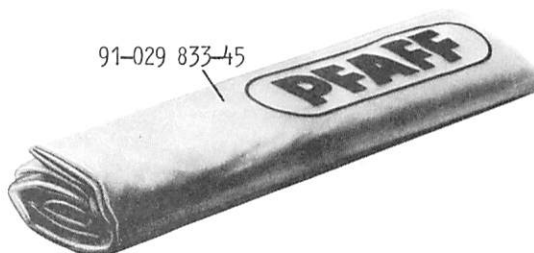

91-129 569-91




Lifting Lever Parts

12-642 170-45	Slip washer 5x0.6, for No.91-025 164-05	91-025 164-05	Pressure spring for No.91-025 182-15
13-052 256-15	Split pin 4x18, for No.91-025 194-91	91-025 165-45	Connecting rod joint for No.91-025 182-15
91-000 029-15	Fillister-head screw for No.91-025 165-45	91-025 182-15	Lifting lever connecting rod
91-000 078-15	Fillister-head screw for No.91-025 194-91	91-025 186-45	Lifting lever
91-000 153-15	Pin, threaded, for No.91-025 187-15	91-025 187-15	Lifting lever pin for No.91-025 186-45
91-000 367-15	Pin, threaded, for No.91-030 246-15	<u>91-025 194-91</u>	Bell crank bracket, w/ split pin No.13-052 256-15
91-001 513-05	Hexagon-nut for No.91-025 182-15	91-030 246-15	Hinge stud for No.91-025 186-45
91-002 536-05	Washer for No.91-025 164-05		


Accessory Parts

11-460 250-25	Round-head wood screw 4.5x25 DIN 96-St, for No.91-004 168-91
12-640 170-55	Slip washer 5 DIN 6799, for No.91-004 171-15
91-000 112-25	Knurled screw for No.91-053 875-21
<u>91-004 168-91</u>	Belt guard, complete, consisting of Nos.12-640 170-55; 91-004 169-45; 91-004 170-45; 91-004 171-15; 91-004 172-05; 91-004 173-15
91-004 169-45	Belt guard bracket
91-004 170-45	Belt guard
91-004 171-15	Hinge stud for Nos.91-004 169-45; 91-004 170-45
91-004 172-05	Torsion spring for No.91-004 170-45
91-004 173-15	Guide stud for No.91-004 170-45
91-026 242-93 x Model,	Edge stitcher, left, w/ material guide
91-026 414-93 x Model,	Edge stitcher, left, w/ gauge
91-029 007-91	Screwdriver, (6.0 mm wide)
91-029 480-91	Screwdriver, (4.8 mm wide)
91-029 601-25	Washer for No.11-460 250-25
91-029 831-91	Machine rest
91-029 833-45	Protective cover
91-029 946-91	Screwdriver (2.8 mm wide)
91-053 875-21	Edge guide
91-129 569-91	Oil can, filled
99-129 580-93 x Needle size	Wrapper w/ System 34 needles

 


4.2.

Accessory Parts

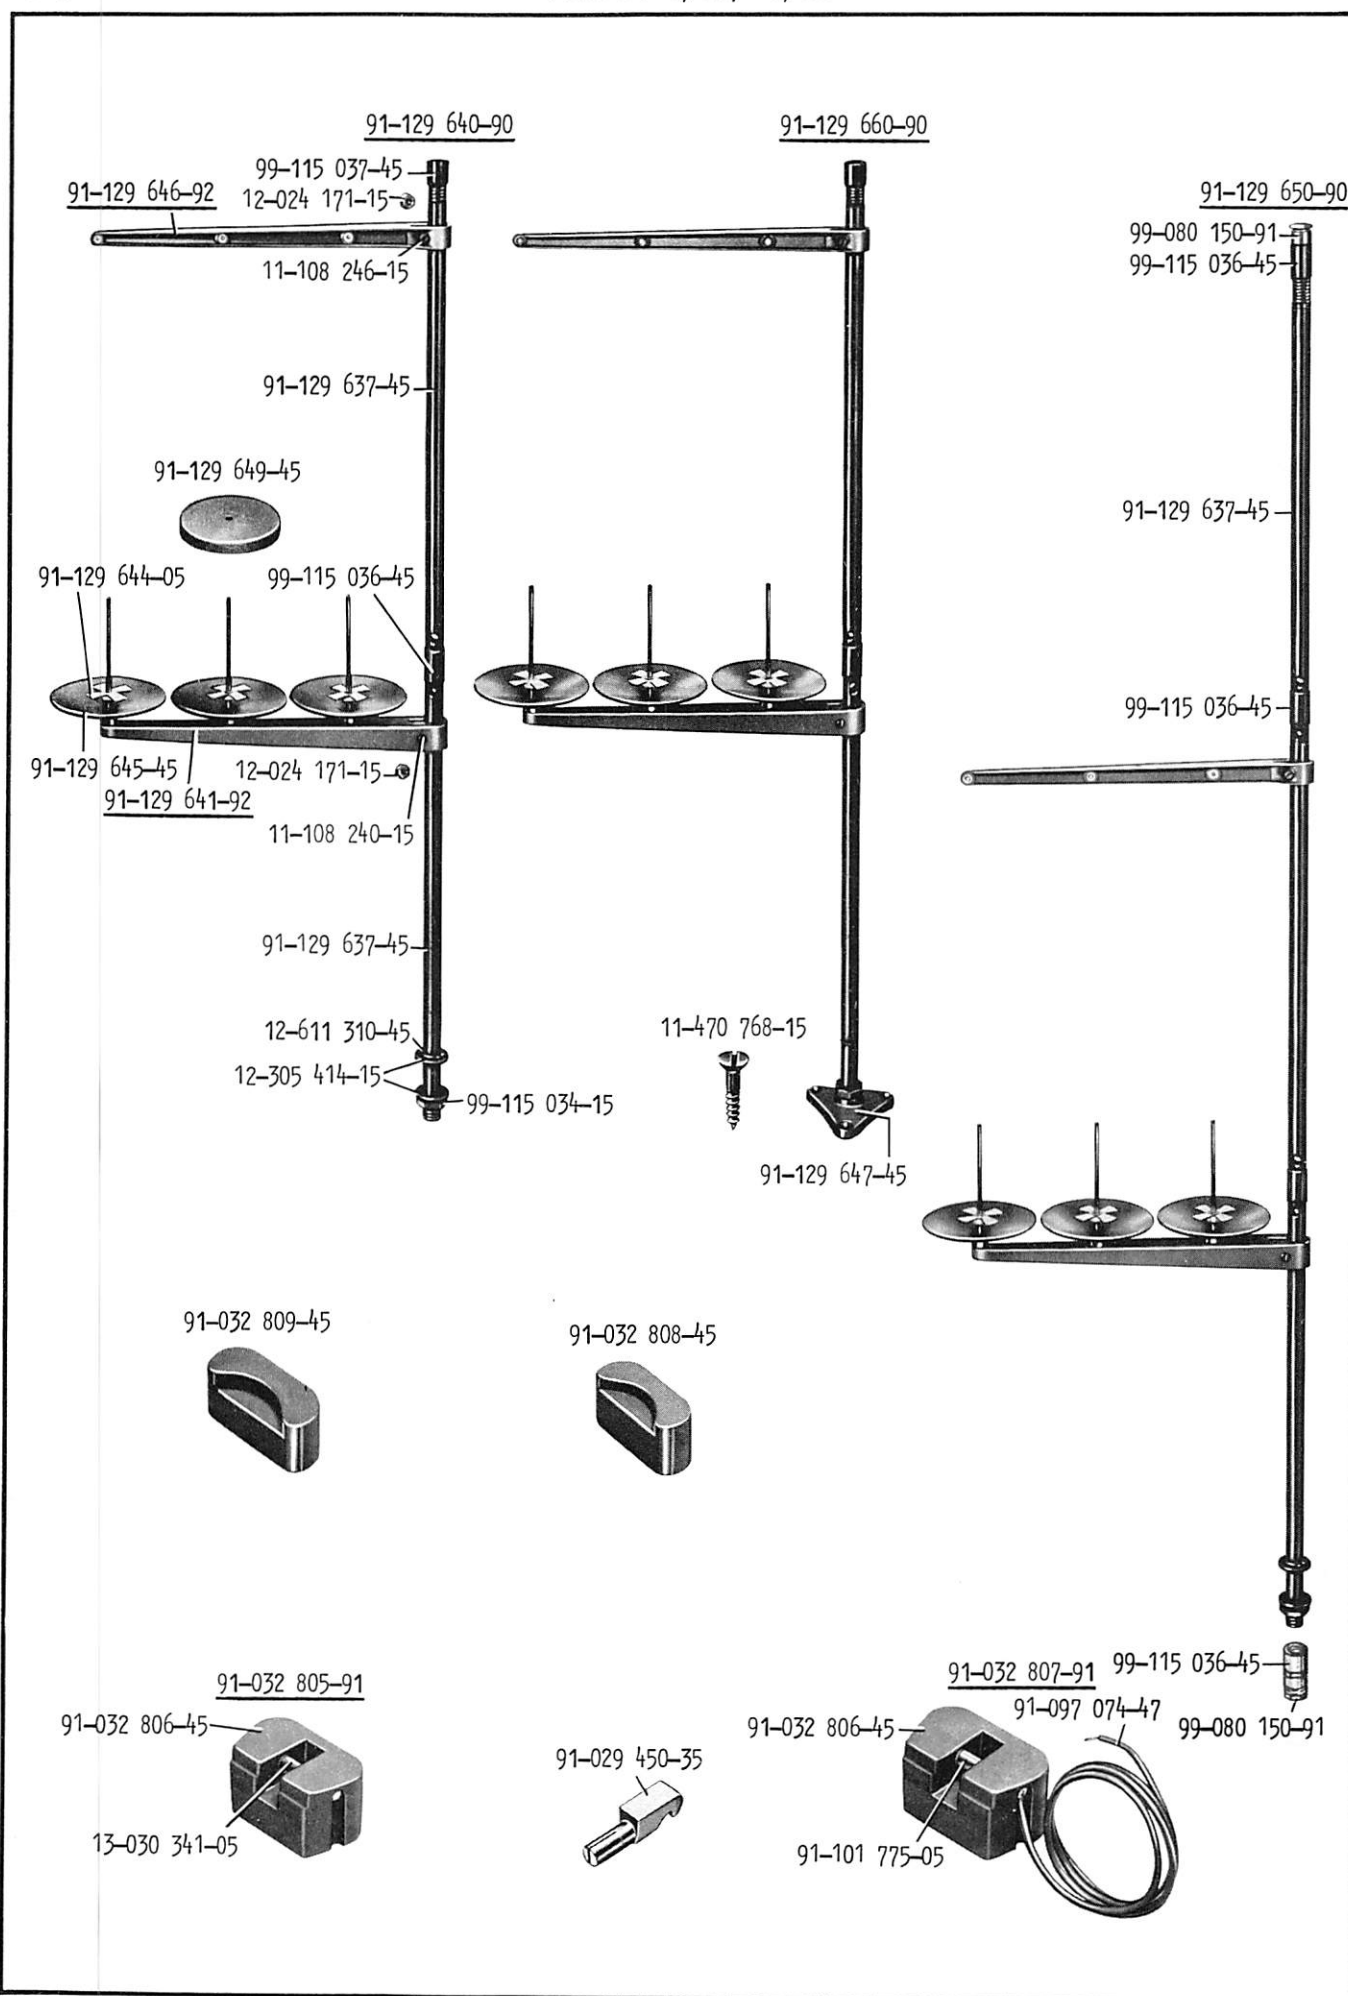




11-108 240-15	Pan-head screw A M 5x20 DIN 84-8.8, for No.91-129 641-92	91-129 637-45	Spool rest rod
11-108 246-15	Pan-head screw A M 5x25 DIN 84-8.8, for No.91-129 646-92	<u>91-129 640-90</u>	Thread unwinder (standard version), complete, consisting of Nos.12-305 414-15; 12-611 310-45; 91-129 637-45; 91-129 641-92; 91-129 644-05; 91-129 645-45; 91-129 646-92; 91-129 649-45; 99-115 034-15; 99-115 036-45; 99-115 037-45
11-470 768-15	Countersunk wood screw 5.5x22 DIN 97-St, for No.91-129 647-45	<u>91-129 641-92</u>	Spool rest w/ No.11-108 240-15 pan-head screw No.12-024 171-15 hexagon nut
12-024 171-15	Hexagon nut M 5 DIN 934-8, for Nos.11-108 240-15; 11-108 246-15	91-129 644-05	Spool retaining washer
12-305 414-15	Washer A 19 DIN 125-St, for Nos.91-129 640-90; 91-129 650-90	91-129 645-45	Spool disc
12-611 310-45	Circlip 18x1.5 DIN 471	<u>91-129 646-92</u>	Thread guide w/ No.11-108 246-15 pan-head screw No.12-024 171-15 hexagon nut
13-030 341-05	Cylindrical pin 5H8x40 DIN 7, for No.91-032 805-91	91-129 647-45	Thread unwinder base for No.91-129 660-90
91-029 450-35	Hinge stud for Nos.91-032 805-91; 91-032 807-91	91-129 649-45	Spool pin washer (foam rubber)
<u>91-032 805-91</u>	Hinge block (power drive), left, complete, consisting of Nos.13-030 341-05; 91-032 806-45 No. <u>91-029 934-91</u> Hinge block (foot drive), left, complete, not ill. Same components as No.91-032 805-91, but incorporating hinge block No.91-029 931-45	<u>91-129 650-90</u>	Thread unwinder (special version), complete, Same components as No.91-129 640-90, but incorporating No.91-129 637-45 Spool rest rod (3x) No.99-115 036-45 Sleeve (4x) No.99-080 150-91 Gland (for power cord)
91-032 806-45	Hinge block for Nos.91-032 805-91; 91-032 807-91	<u>91-129 660-90</u>	Thread unwinder (special version), complete, Same components as No.91-129 640-90, but incorporating No.11-470 768-15 Countersunk wood screw No.91-129 647-45 Thread unwinder base
<u>91-032 807-91</u>	Hinge block (power drive), right, complete, consisting of Nos.91-032 806-45; 91-097 074-47; 91-101 775-05 No. <u>91-029 933-91</u> Hinge block (foot drive), right, complete, not ill. Same components as No.91-032 807-91, but incorporating hinge block No.91-029 931-45	99-080 150-91	Gland (for power cord)
91-032 808-45	Rubber cushion, 4 mm recess (left & right for power drive, left for foot drive) No.91-032 828-45 Rubber cushion (foot drive), right, not ill.	99-115 034-15	Hexagon nut for No.91-129 637-45
91-032 809-45	Rubber cushion (power-drive), 7 mm recess (special version)	99-115 036-45	Sleeve for No.91-129 637-45
91-097 074-47	Earth wire for No.91-101 775-05	99-115 037-45	Cap screw
91-101 775-05	Cylindrical pin for No.91-032 807-91		

 

4.3.

Accessory Parts

914031411-9

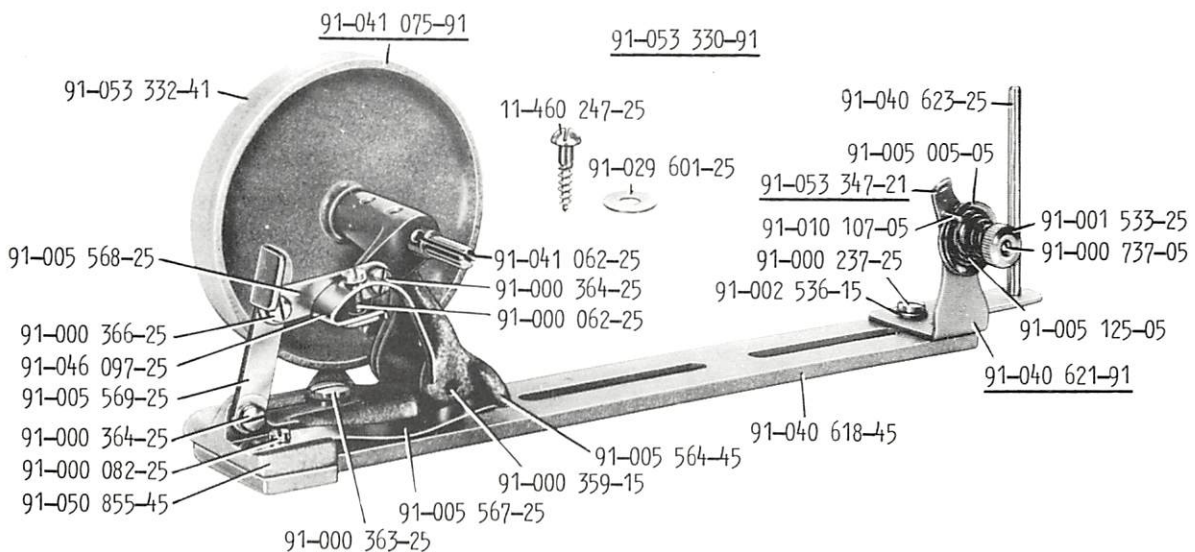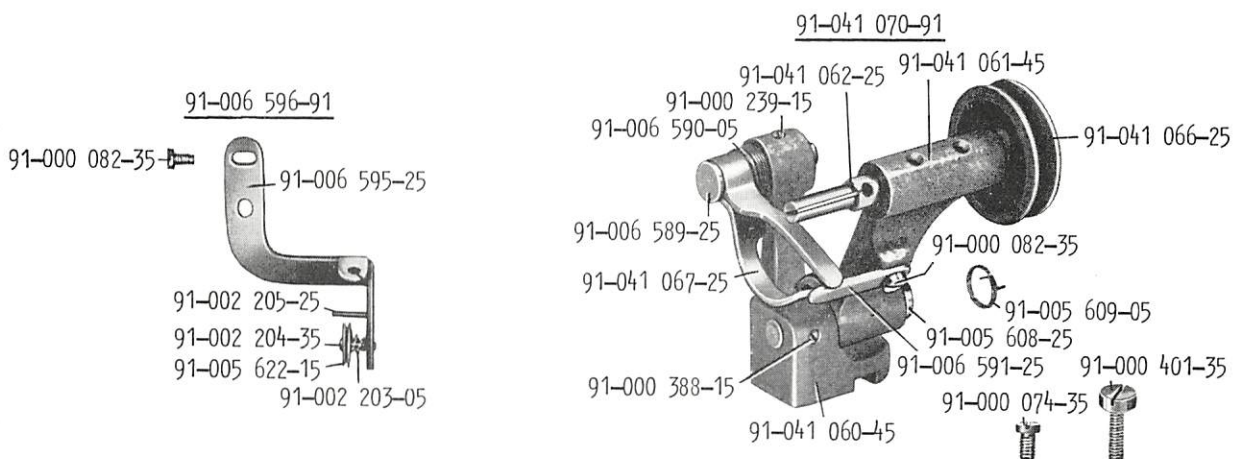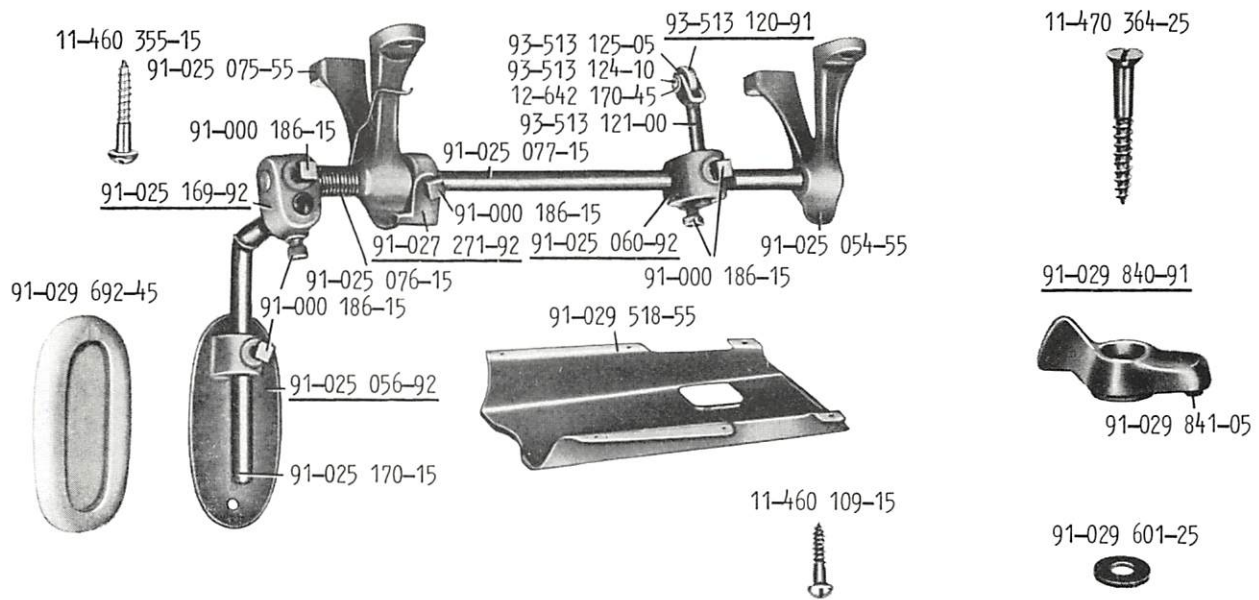
91-031 568-91

11-460 109-15	Round-head wood screw 3x13 DIN 96-St, for No.91-029 518-55	91-006 595-25	Bobbin winder tension bracket for No.91-006 596-91
11-460 247-25	Round-head wood screw 4.5x20 DIN 96-St, for No.91-053 330-91	<u>91-006 596-91</u>	Thread tension (foot drive), complete, consisting of Nos.91-002 203-05; 91-002 204-35; 91-002 205-25; 91-005 622-15; 91-006 595-25
11-460 355-15	Round-head wood screw 5.5x25 DIN 96-St, for No.91-031 568-91	91-010 107-05	Position pin for No.91-005 005-05
11-470 364-25	Countersunk wood screw 5.5x40 DIN 97-St, for No.91-029 840-91	91-025 054-55	Bearing bracket, rear, for No.91-025 077-15
12-642 170-45	Slip washer 5x0.6, for No.93-513 120-91	<u>91-025 056-92</u>	Knee lever plate, w/ square-head screw No.91-000 186-15
91-000 062-25	Fillister-head screw for No.91-046 097-25	<u>91-025 060-92</u>	Rock shaft lifting bracket, w/ square-head screw No.91-000 186-15
91-000 074-35	Fillister-head screw for No.91-041 060-45	91-025 075-55	Bearing bracket, front, for No.91-025 077-15
91-000 082-25	Fillister-head screw for No.91-005 567-25	91-025 076-15	Torsion spring for No.91-025 170-15
91-000 082-35	Fillister-head screw for Nos.91-006 591-25; 91-006 596-91	91-025 077-15	Knee lifter rock shaft
91-000 186-15	Square-head screw for Nos.91-025 056-92; 91-025 060-92; 91-025 169-92; 91-027 271-92	<u>91-025 169-92</u>	Knee plate arm bracket, w/ square-head screw No.91-000 186-15
91-000 237-25	Fillister-head screw for No.91-040 621-91	91-025 170-15	Knee plate arm
91-000 239-15	Pin, threaded, for No.91-006 589-25	<u>91-027 271-92</u>	Stop dog, w/ square-head screw No.91-000 186-15
91-000 359-15	Dog-point screw for Nos.91-005 564-45; 91-050 855-45	91-029 518-55	Oil drip pan
91-000 363-25	Fillister-head screw for No.91-041 075-91	91-029 601-25	Washer for Nos.11-460 247-25; 91-029 840-91
91-000 364-25	Fillister-head screw for Nos.91-005 568-25; 91-005 569-25	91-029 692-45	Rubber pad cover for No.91-025 056-92
91-000 366-25	Fillister-head screw for Nos.91-005 568-25; 91-005 569-25	<u>91-029 840-91</u>	Catch, w/ leather No.91-029 841-05
91-000 388-15	Pin, threaded, for No.91-005 608-25	91-029 841-05	Leather for No.91-029 840-91
91-000 401-35	Fillister-head screw for No.91-041 070-91	<u>91-031 568-91</u>	Knee lever, complete, consisting of Nos.91-025 054-55; 91-025 056-92; 91-025 060-92; 91-025 075-55; 91-025 076-15; 91-025 077-15; 91-025 169-92; 91-025 170-15; 91-027 271-92; 93-513 120-91
91-000 737-05	Tension stud	91-040 618-45	Bobbin winder base for No.91-053 330-91
91-001 533-25	Knurled nut for No.91-000 737-05	<u>91-040 621-91</u>	Thread tension, complete, consisting of Nos.91-000 737-05; 91-001 533-25; 91-005 005-05; 91-005 125-05; 91-040 623-25; 91-053 347-21
91-002 203-05	Tension spring for No.91-005 622-15	91-040 623-25	Spool pin
91-002 204-35	Tension pin for No.91-006 595-25	91-041 060-45	Bobbin winder frame base for No.91-041 061-45
91-002 205-25	Thread guide for No.91-006 595-25	91-041 061-45	Bobbin winder frame for No.91-041 060-45
91-002 536-15	Washer for No.91-000 237-25	91-041 062-25	Bobbin winder spindle
91-005 005-05	Tension disc	91-041 066-25	Bobbin winder pulley for No.91-041 070-91
91-005 125-05	Tension spring	91-041 067-25	Bobbin winder stop latch for No.91-041 070-91
91-005 564-45	Bobbin winder frame	<u>91-041 070-91</u>	Base plate bobbin winder (foot drive), complete, consisting of Nos.91-000 082-35; 91-000 239-15; 91-000 388-15; 91-005 608-25; 91-005 609-05; 91-006 589-25; 91-006 590-05; 91-006 591-25; 91-041 060-45; 91-041 061-45; 91-041 062-25; 91-041 066-25; 91-041 067-25
91-005 567-25	Bobbin winder frame spring		
91-005 568-25	Bobbin winder stop latch trip lever for No.91-005 564-45		
91-005 569-25	Bobbin winder thumb lever for No.91-005 568-25		
91-005 608-25	Hinge stud for No.91-041 061-45		
91-005 609-05	Torsion spring for No.91-041 061-45		
91-005 622-15	Tension disc for No.91-002 204-35		
91-006 589-25	Hinge stud for No.91-041 067-25		
91-006 590-05	Torsion spring for No.91-041 067-25		
91-006 591-25	Stop for No.91-041 067-25		

- 91-041 075-91 Bobbin winder, complete,
consisting of Nos. 91-000 062-25;
91-000 082-25; 91-000 359-15;
91-000 364-25; 91-000 366-25;
91-005 564-45; 91-005 567-25;
91-005 568-25; 91-005 569-25;
91-041 062-25; 91-046 097-25;
91-050 855-45; 91-053 332-41
- 91-046 097-25 Bobbin winder stop latch
- 91-050 855-45 Bobbin winder frame base
- 91-053 330-91 Bobbin winder table model (power drive), complete,
consisting of Nos. 91-000 237-25; 91-000 363-25;
91-002 536-15; 91-040 618-45; 91-040 621-91;
91-041 075-91
- 91-053 332-41 Bobbin winder pulley
- 91-053 347-21 Bobbin winder tension, w/
position pin No. 91-010 107-05
- 93-513 120-91 Switch lever, complete,
consisting of Nos. 12-642 170-45; 93-513 121-00;
93-513 124-10; 93-513 125-05
- 93-513 121-00 Lifting bracket extension for No. 93-513 120-91
- 93-513 124-10 Hinge stud for No. 93-513 125-05
- 93-513 125-05 Roller for No. 93-513 120-91

5.


Complementary Parts
Pfaff 34-6 N10
Pfaff 34-4

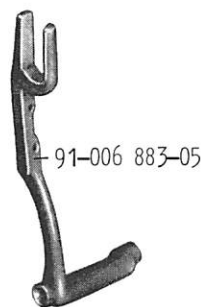


91-009 197-35



91-008 468-92

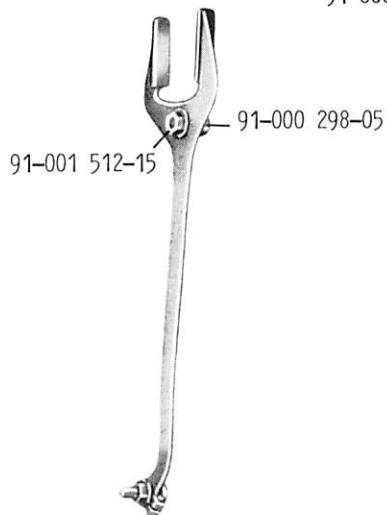


91-006 882-92

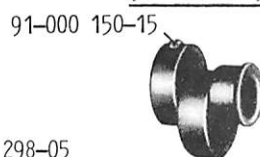

91-008 564-05



91-048 277-04

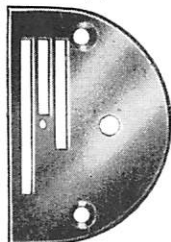

91-047 106-04




91-051 317-03



Pfaff 34-4

91-046 397-04

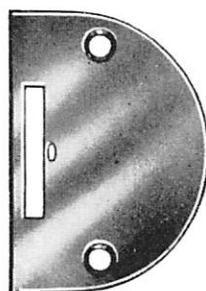

91-046 398-04




91-051 714-15



91-051 708-93



91-025 369-05

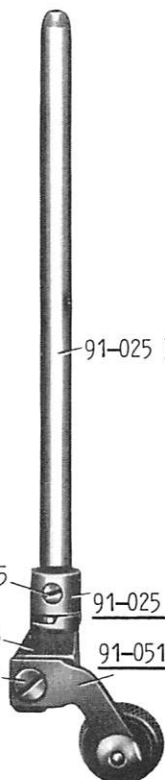

91-025 379-91

12-640 050-55

91-025 373-12


91-025 376-05

91-051 155-93

91-025 374-05

91-000 409-15

91-053 941-91

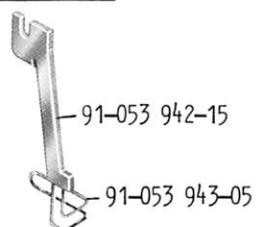

91-051 159-93



Complementary Parts for the Pfaff 34-6 N10
(For standard parts please refer to the Pfaff 34-6/01; -6/02)

5.

91-000 150-15 Pin, threaded, for No.91-006 882-92

91-000 298-05 Dog-point screw for No.91-008 468-92

91-001 512-15 Hexagon nut for No.91-000 298-05

91-006 882-92 Feed lifting and driving eccentric, w/
pin, threaded, No.91-000 150-15

91-006 883-05 Feed bar

91-008 468-92 Feed forked connection, w/
No.91-000 298-05 Dog-point screw
No.91-001 512-15 Hexagon nut

91-008 564-05 Feed regulator link

91-009 197-35 Feed regulator index plate

91-047 106-04 x Model
Feed dog

91-048 277-04 x Model
Needle plate

91-051 317-03 x Model
Presser foot

Complementary Parts for the Pfaff 34-4
(For standard parts please refer to the Pfaff 34-6/01; -6/02)

11-173 225-15 Pan-head screw A M 5x10 DIN 85-8.8, for No.91-051 714-15	<u>91-051 152-93</u> x Model Roller presser, swing-type, 3.0 mm wide, complete, (special type), not ill. consisting of: No.91-001 027-15 Countersunk screw No.91-001 665-15 Two-sided nut No.91-001 923-14 x Model Roller presser roller, small
12-640 050-55 Slip washer 1.5 DIN 6799, for No.91-025 376-05	No.91-046 187-04 Bearing needle, 16 ea No.91-051 153-15 Roller presser arm
91-000 409-15 End screw for No.91-025 379-91	<u>91-051 155-93</u> x Model Roller presser, swing-type, 4.5 mm wide, complete, (standard type) consisting of: No.91-001 027-15 Countersunk screw No.91-001 665-15 Two-sided nut No.91-001 927-14 x Model Roller presser roller, small
91-000 410-15 Pin, threaded, for No.91-025 373-12	No.91-046 187-04 Bearing needle, 16 ea No.91-051 153-15 Roller presser arm
91-000 717-15 Fillister-head screw for Nos.91-051 152-93; 91-051 155-93; 91-051 157-93; 91-051 159-93	<u>91-051 157-93</u> x Model Roller presser, swing-type, 3.0 mm wide, complete, (special type), not ill. consisting of: No.91-001 027-15 Countersunk screw No.91-001 665-15 Two-sided nut No.91-001 929-14 x Model Roller presser roller, large
91-025 369-05 Presser bar	No.91-046 187-04 Bearing needle, 16 ea No.91-051 011-15 Roller presser arm
<u>91-025 373-12</u> Position collar, w/ pin, threaded, for No.91-000 410-15	
91-025 374-05 Spring stop for No.91-025 379-91	
91-025 376-05 Pressure spring for No.91-025 379-91	
<u>91-025 379-91</u> Spring stop, complete, consisting of Nos.12-640 050-55; 91-000 409-15; 91-025 374-05; 91-025 376-05	
91-046 397-04 x Model Needle plate	
91-046 398-04 x Model Feed dog	

Complementary Parts for the Pfaff 34-4
 (For standard parts please refer to the Pfaff 34-6/01; -6/02)

91-051 159-93 x Model

Roller presser, swing-type, 4.5 mm wide,
 complete (special type)

consisting of:

No.91-001 027-15 Countersunk screw

No.91-001 665-15 Two-sided nut

No.91-001 931-14 x Model

Roller presser roller,
 large

No.91-046 187-04 Bearing needle, 16 ea

No.91-051 011-15 Roller presser arm

91-051 708-93 x Model

Roller presser, swing-type, 3.0 mm or 4.5 mm wide,
 complete, (special type)

consisting of:

No.14-650 104-05 Ball 1/16" IV DIN 5401, 43 ea

No.91-000 821-15 Fillister-head screw

No.91-051 536-15 Cone stud

No.91-051 709-14 x Model

Roller presser roller

No.91-051 710-15 Roller presser arm

No.91-100 168-15 Pin, threaded

91-051 714-15 Roller presser arm bracket for No.91-051 708-93

91-053 232-15 Roller presser arm bracket for Nos.91-051 152-93; 91-051 155-93;
 91-051 157-93; 91-051 159-93

91-053 941-91


Finger guard, complete,
 consisting of Nos.91-053 942-15; 91-053 943-05

91-053 942-15 Finger guard holder


91-053 943-05 Finger guard

6.

Complementary Parts
Pfaff 34-5
Pfaff 34-5-171

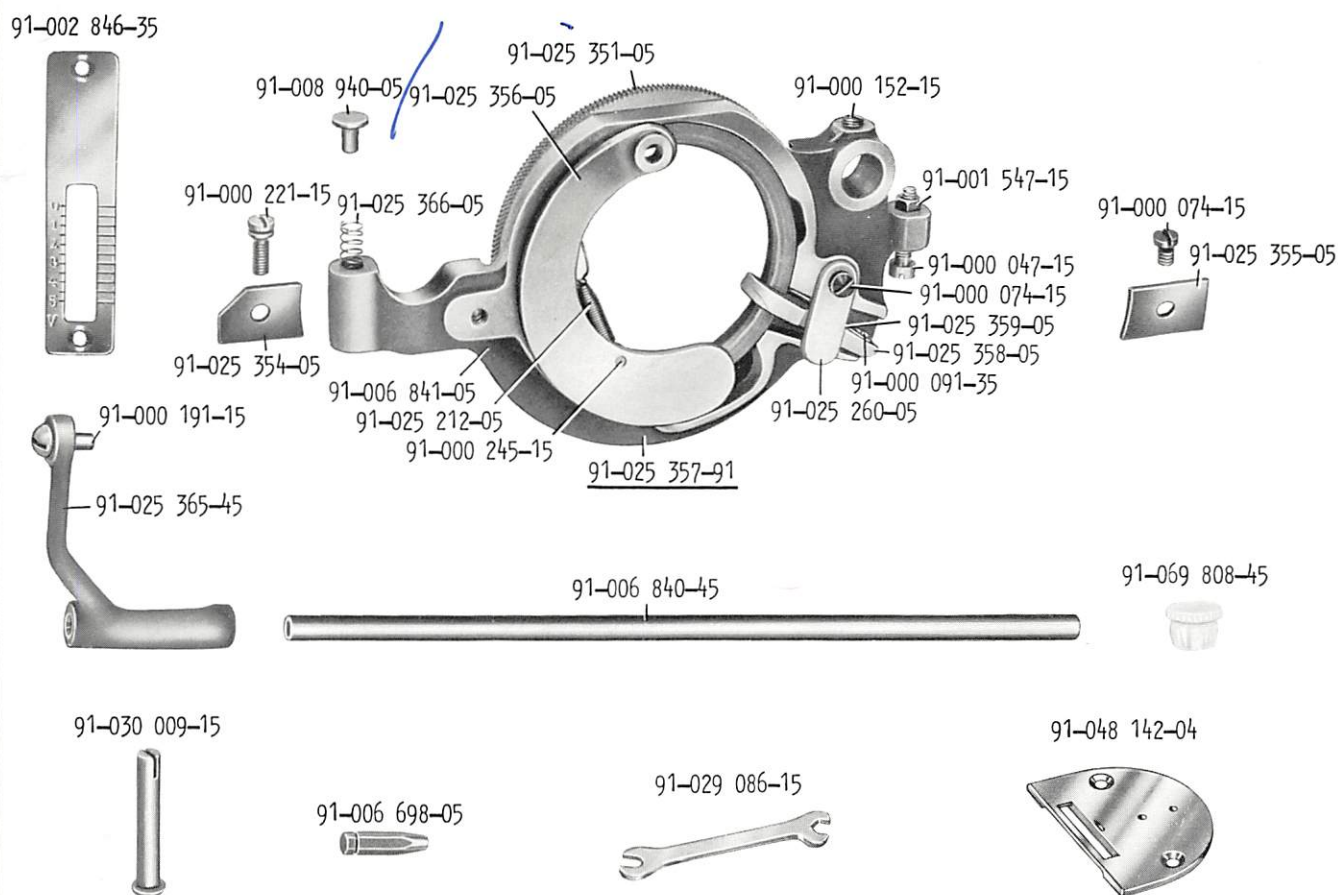

Pfaff 34-5-171

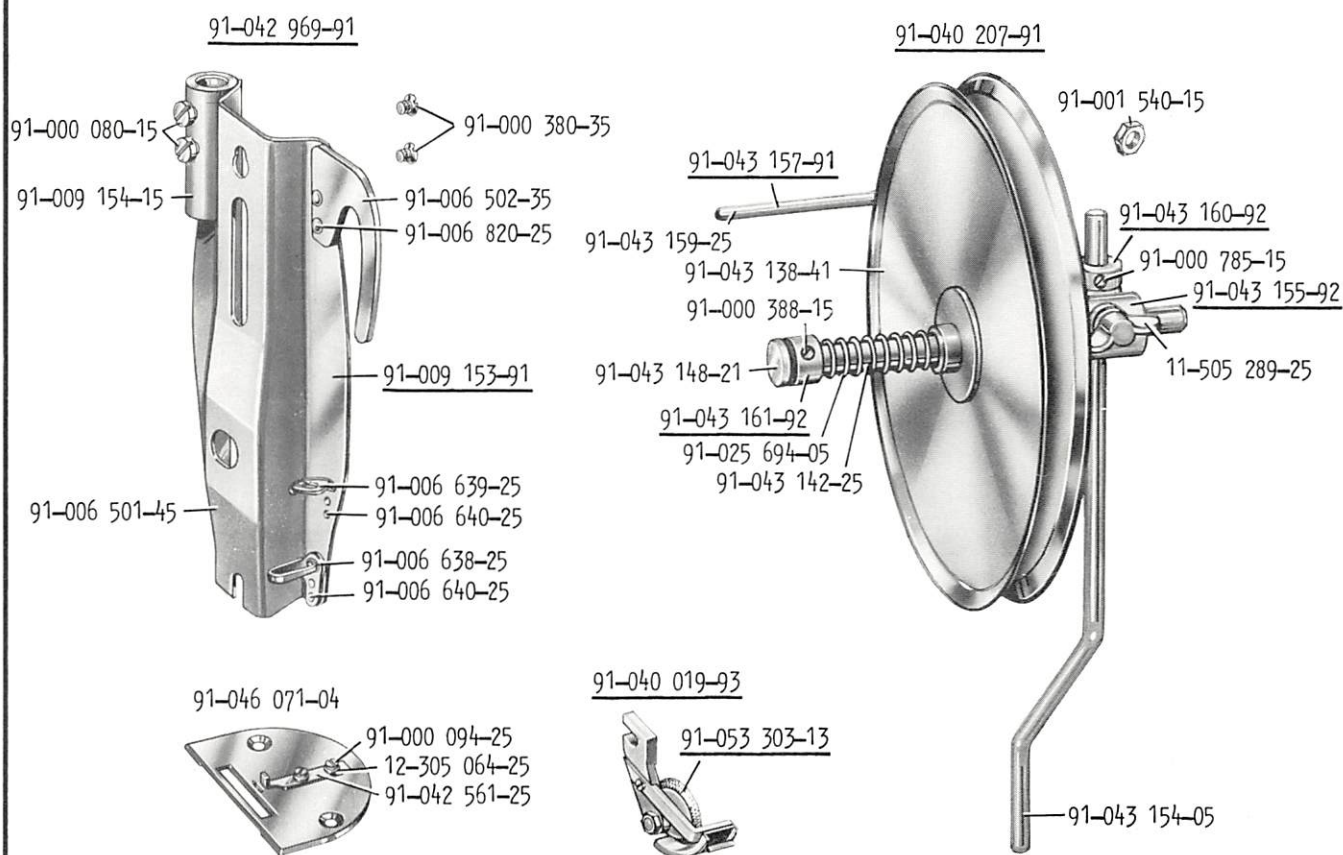

Complementary Parts for the Pfaff 34-5
(For standard parts please refer to the Pfaff 34-4)

6.

91-000 047-15 Fillister-head screw for No.91-006 841-05
 91-000 074-15 Fillister-head screw for Nos.91-025 260-05; 91-025 355-05
 91-000 091-35 Fillister-head screw for No.91-025 359-05
 91-000 152-15 Pin, threaded, for No.91-006 840-45
 91-000 191-15 Round-head screw for No.91-025 365-45
 91-000 221-15 Fillister-head screw for Nos.91-025 212-05; 91-025 354-05
 91-000 245-15 Spring suspension screw for No.91-025 212-05
 91-001 547-15 Hexagon nut for No.91-000 047-15
 91-002 846-35 Feed regulator index plate
 91-006 698-05 Center stud, front,
 for No.91-006 840-45
 91-006 840-45 Feed wheel race shaft
 91-006 841-05 Feed wheel race
 91-008 940-05 Plunger for feed wheel race
 91-025 212-05 Return spring for No.91-025 356-05
 91-025 260-05 Position bracket for No.91-025 358-05
 91-025 351-05 Feed wheel

Complementary Parts for the Pfaff 34-5-171
(For standard parts please refer to the Pfaff 34-5)

11-505 289-25 Wing screw M 6x15 DIN 316-4.6, for No.91-043 155-92	91-009 154-15 Tape reel bracket holder
12-305 064-25 Washer A 2.5 DIN 125-St, for No.91-000 094-25	91-025 694-05 Pressure spring for No.91-043 142-25
91-000 080-15 Fillister-head screw for No.91-043 154-15	<u>91-040 019-93</u> x Model
91-000 094-25 Round-head screw for No.91-042 561-25	Roller presser, w/ tape guide, complete, consisting of:
91-000 380-35 Flat-head screw for No.91-009 154-15	No.91-000 996-15 Round-head screw
91-000 388-15 Pin, threaded, for No.91-043 161-92	No.91-053 303-13 x Model
91-000 785-15 Pin, threaded, for No.91-043 160-92	No.91-053 305-23 Roller presser
91-001 540-15 Hexagon nut for No.91-043 159-25	Tape guide
91-006 501-45 Face cover	Orders should specify tape width and thickness
91-006 502-35 Take-up lever guard	<u>91-040 207-91</u> Tape reel bracket, complete, consisting of Nos.91-025 694-05; 91-043 138-41; 91-043 142-25; 91-043 148-21; 91-043 154-05; 91-043 155-92; 91-043 157-91; 91-043 161-92
91-006 638-25 Thread guide, lower, for No.91-009 153-91	No.91-050 706-91 Tape reel bracket, complete, not ill. Same components as No.91-040 207-91, but incorporating No.91-043 136-41 Tape reel disc
91-006 639-25 Thread guide, center, for No.91-009 153-91	
91-006 640-25 Rivet for Nos.91-006 638-25; 91-006 639-25	
91-006 820-25 Rivet for No.91-006 502-35	
<u>91-009 153-91</u> Face cover, complete, consisting of Nos.91-006 501-45; 91-006 502-35; 91-006 638-25; 91-006 639-25; 91-006 640-25; 91-006 820-25	91-042 561-25 Material guide

Complementary Parts for the Pfaff 34-5
(For standard parts please refer to the Pfaff 34-4)

91-025 354-05 Feed wheel position bracket, left

91-025 355-05 Feed wheel position bracket, right

91-025 356-05 Feed wheel driving bracket for No.91-025 357-91

91-025 357-91 Feed wheel driving bracket, complete,
consisting of Nos.91-000 245-15;
91-025 212-05; 91-025 356-05

91-025 358-05 Back-lash retainer for feed wheel

91-025 359-05 Leaf spring for No.91-025 358-05

91-025 365-45 Feed wheel driving lever

91-025 366-05 Pressure spring for No.91-008 940-05

91-029 086-15 Spanner for No.91-001 547-15

91-030 009-15 Extension stud for bed plate center leg

91-048 142-04 x Model
Needle plate

91-069 808-45 Plug for arm

Complementary Parts for the Pfaff 34-5-171
(For standard parts please refer to the Pfaff 34-5)

91-042 969-91 Face cover, w/ tape reel bracket holder,
complete,
consisting of Nos.91-000 080-15;
91-000 380-35; 91-009 153-91;
91-009 154-15

91-043 138-41 Tape reel disc for No.91-040 207-91
No.91-043 136-41 Tape reel disc,
not ill.,
for No.91-050 706-91

91-043 142-25 Guide bushing for No.91-043 148-21

91-043 148-21 Fulcrum stud for No.91-043 138-41

91-043 154-05 Tape reel bracket

91-043 155-92 Angular bracket, w/
wing screw No.11-505 289-25

91-043 157-91 Guide bracket, complete,
consisting of Nos.91-001 540-15;
91-043 159-25; 91-043 160-92

91-043 159-25 Guide bracket for No.91-043 157-91

91-043 160-92 Set collar, w/
pin, threaded, No.91-000 785-15,
for No.91-043 157-91

91-043 161-92 Set collar, w/
pin, threaded, No.91-000 388-15,
for No.91-043 142-25

91-046 071-04 x Model
Needle plate

91-053 303-13 x Model
Roller presser, complete,
consisting of:
No.91-000 327-15 Countersunk screw
No.91-001 536-15 Hexagon nut
No.91-001 792-14 x Model
Roller presser roller
No.91-053 304-15 Roller presser arm


7.

Complementary Parts

Pfaff 34-4-92

Pfaff 34-5-92

7.

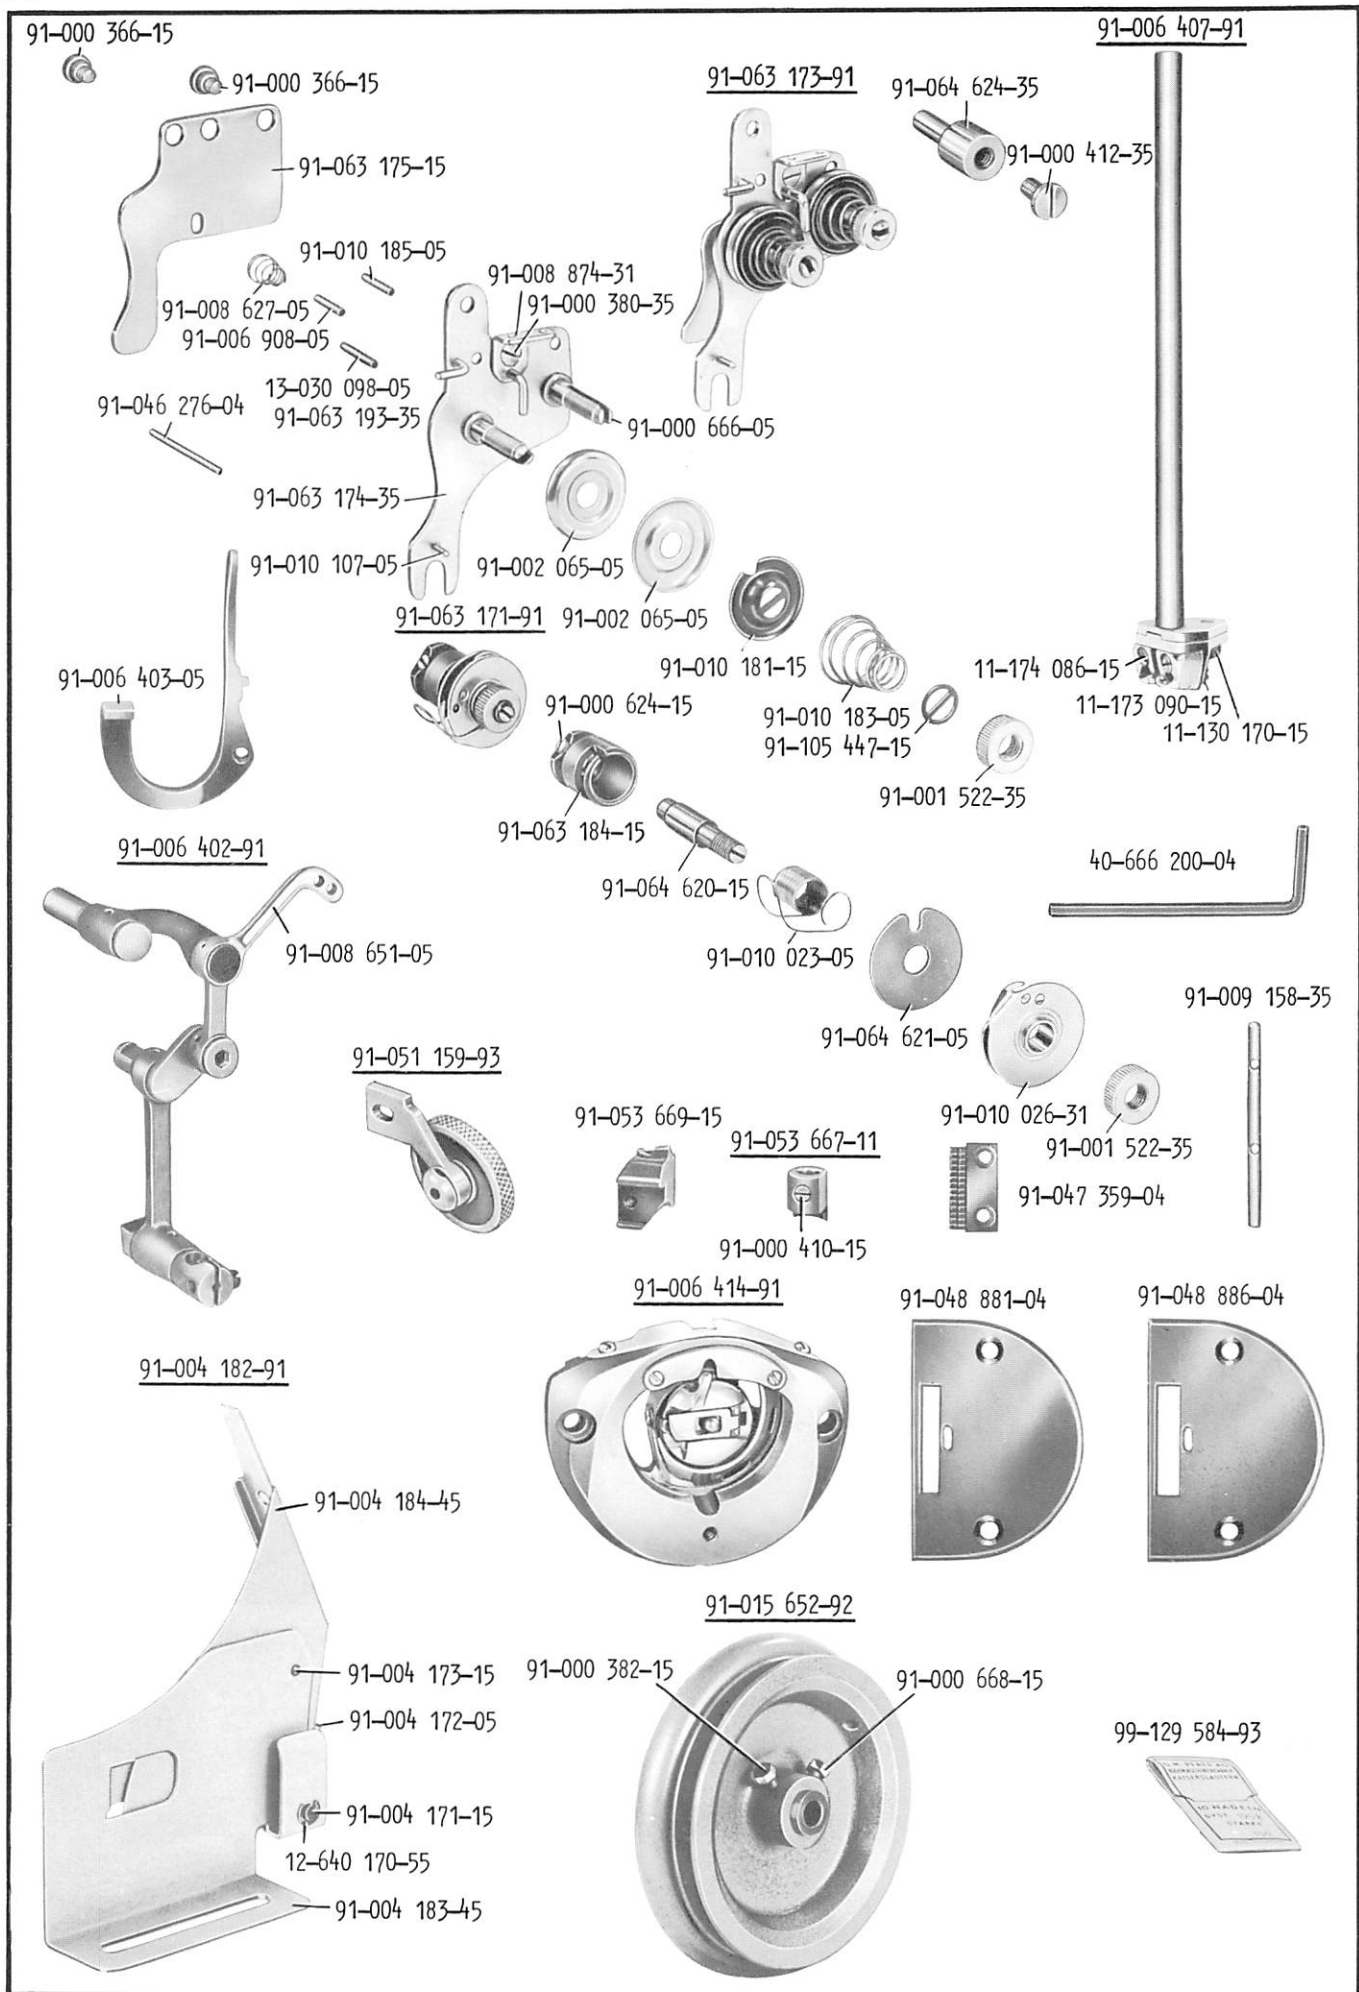

11-130 170-15	Pan-head screw M 4x6 DIN 912-8.8, for No.91-006 407-91	91-010 023-05	Thread check spring (Models A & B) No.91-010 937-05 Thread check spring (Models C & D), not ill.
11-173 090-15	Fillister-head screw A M 3x5 DIN 85-8.8, for No.91-006 407-91	91-010 026-31	Thread controller disc
11-174 086-15	Fillister-head screw M 3x4 DIN 920-5.8, (needle set screw)	91-010 107-05	Position pin for No.91-010 026-31
12-640 170-55	Slip washer 5 DIN 6799, for No.91-004 171-15	91-010 181-15	Tension release washer
13-030 098-05	Tension release 2H8x12 DIN 7-9 S 20 K, for lower tension	91-010 183-05	Tension spring
40-666 200-04	Key 3 DIN 911, for No.11-130 170-15	91-010 185-05	Tension release pin for upper tension
91-000 366-15	Fillister-head screw for No.91-063 175-15	<u>91-015 652-92</u>	Balance wheel (Model D), w/ hexagon screws Nos.91-000 382-15; 91-000 668-15
91-000 380-35	Flat-head screw for No.91-008 874-31	91-046 276-04	Tension release plunger
91-000 382-15	Hexagon-head screw for No.91-015 652-92	91-047 359-04	x Model Feed dog (subcl.-4-92)
91-000 410-15	Pin, threaded, for No.91-053 667-11	91-048 881-04	x Model Needle plate (subcl.-4-92)
91-000 412-35	Fillister-head screw for No.91-063 173-91	91-048 886-04	x Model Needle plate (subcl.-5-92)
91-000 624-15	Pin, threaded, for No.91-064 620-15	<u>91-051 159-93</u>	x Model Roller presser, swing-type, 4.5 mm wide, complete, consisting of: No.91-001 027-15 Countersunk screw No.91-001 665-15 Two-sided nut No.91-001 931-14 x Model Roller presser roller, large No.91-046 187-04 Bearing needle, 16 ea No.91-051 011-15 Roller presser arm
91-000 666-05	Tension stud	91-053 669-15	Roller presser bracket
91-000 668-15	Hexagon-head screw for No.91-015 652-92	<u>91-053 667-11</u>	Position collar, w/ pin, threaded, No.91-000 410-15
91-001 522-35	Knurled nut for Nos.91-000 666-05; 91-064 620-15	<u>91-063 171-91</u>	Thread guide (Model A & B), complete, consisting of Nos.91-000 624-15; 91-001 522-35; 91-010 023-05; 91-010 026-31; 91-063 184-15; 91-064 620-15; 91-064 621-05 No.91-063 181-91 Thread guide, complete, (Models C; D), not ill. Same components as No.91-063 171-91, but incorporating No.91-010 937-05 Thread check spring
91-002 065-05	Tension disc	<u>91-063 173-91</u>	Thread tension, complete, consisting of Nos.13-030 098-05; 91-000 366-15; 91-000 380-35; 91-000 666-05; 91-001 522-35; 91-002 065-05; 91-006 908-05; 91-008 627-05; 91-008 874-31; 91-010 107-05; 91-010 181-15; 91-010 183-05; 91-010 185-05; 91-063 174-35; 91-063 175-15; 91-063 193-35; 91-105 447-15
91-004 171-15	Hinge stud for Nos.91-004 183-45; 91-004 184-45	91-063 174-35	Tension bracket
91-004 172-05	Torsion spring for No.91-004 184-45	91-063 175-15	Tension release plate
91-004 173-15	Guide stud for No.91-004 184-45	91-063 184-15	Thread check spring regulator
<u>91-004 182-91</u>	Belt guard (Model D), complete, consisting of Nos.12-640 170-55; 91-004 171-15; 91-004 172-05; 91-004 173-15; 91-004 183-45; 91-004 184-45		
91-004 183-45	Belt guard bracket		
91-004 184-45	Belt guard		
<u>91-006 402-91</u>	Take-up lever, complete Same components as No.91-006 781-91 (see section 1), but incorporating No.91-008 651-05 take-up lever		
91-006 403-05	Tension release lever		
<u>91-006 407-91</u>	Needle bar (adjustable needle holder) w/ No.11-130 170-15 Pan-head screw No.11-173 090-15 Fillister-head screw No.11-174 086-15 Fillister-head screw (needle set screw)		
<u>91-006 414-91</u>	Shuttle race, with shuttle and bobbin case, complete. For component parts see section 3		
91-006 908-05	Position pin for Nos.91-008 627-05; 91-063 175-15		
91-008 627-05	Presser spring for No.91-063 175-15		
91-008 651-05	Take-up lever		
91-008 874-31	Thread guide for No.91-063 173-91		
91-009 158-35	Thread guide		

7. Complementary Parts for the Pfaff 34-4-92 (For standard parts please refer to the Pfaff 34-4)
Complementary Parts for the Pfaff 34-5-92 (For standard parts please refer to the Pfaff 34-5)

91-063 193-35 Thread guide for No.91-063 173-91

91-064 620-15 Thread controller disc stud

91-064 621-05 Thread shield for No.91-063 171-91

91-064 624-35 Spacer for No.91-063 173-91

91-105 447-15 Washer for No.91-001 522-35

99-129 584-93 x Needle size
Wrapper w/ needles (system 134)

91-006 401-45 Arm (not ill.)

8.

Parts of Previous Machines
Pfaff 34
Pfaff 34-31

The number marked with an asterisk and put in parenthesis, e.g. (*91-001 954-05), is no additional order number, but is merely intended to facilitate looking up parts of previous machines. This number must not be listed on orders; the valid part number is the old number listed next to it.

(*91-001 954-05) 91-000 298-05 Hinge screw for No.91-002 844-05

(*91-100 213-15) 91-000 402-15 Fitting screw for No.91-006 518-05

(*11-108 225-15) 91-000 560-15 Fillister-head screw (overall length = 15 mm)

Parts of Previous Pfaff 34-31 Machines

S = Trimming margin

1 894	Cylindrical pin for No.91-015 371-91 (new version)	91-001 686-15	Knurled nut for No.91-006 916-05
1 933	Driving pin for No.91-015 340-05	91-002 044-05	Taper pin for No.91-015 371-91 (old version)
15 349	Needle bar crank	91-004 531-35	Washer for No.91-000 082-35
<u>15 361</u>	Knife driving mechanism, complete, consisting of Nos.91-000 083-15; 91-000 697-15; 91-001 511-15; 91-006 924-45; 91-015 340-05; 91-015 341-05; 91-015 342-45; 91-015 371-91; 91-028 024-15	91-006 502-35	Take-up lever guard for No.91-015 363-91
11-174 086-15	Fillister-head screw M 3x4 DIN 920-5.8, (needle set) screw (new version)	91-006 884-25	Thread guide, upper, for No.91-015 363-91
91-000 056-15	Fillister-head screw for No.91-006 924-45	91-006 901-45	Face plate
91-000 082-35	Fillister-head screw for No.91-006 884-25	91-006 904-05	Presser spring for No.91-006 905-05
91-000 083-15	Fillister-head screw for No.91-000 697-15	91-006 905-05	Spring cap for No.91-006 906-05
91-000 091-35	Fillister-head screw for Nos.91-006 502-35; 91-006 982-25	91-006 906-05	Guide stud for No.91-006 907-05
91-000 153-15	Pin, threaded, for No.91-006 941-05	91-006 907-05	Knife bar angle extension for Nos.91-006 906-05; 91-006 966-05
91-000 243-15	Pan-head screw for No.91-015 348-45 (new version)	91-006 908-05	Stop pin for No.91-006 966-05
91-000 377-15	Fillister-head screw for No.91-006 918-05	91-006 910-35	Spacer, 1.0 mm, for No.91-015 323-05
91-000 407-25	Fillister-head screw for Nos.91-006 910-35; 91-015 323-05	91-006 915-45	Knife driving shaft crank, front, for No.91-015 371-91
91-000 442-35	Truss-head screw for Nos.91-015 308-45; 91-015 345-45	91-006 916-05	Plunger for No.91-015 371-91
91-000 445-15	Countersunk screw for No.91-006 907-05	91-006 917-05	Pressure spring for No.91-006 916-05
91-000 543-15	Fillister-head (needle set) screw (old version)	91-006 918-05	Knife bar disengaging latch for No.91-015 371-91
91-000 560-15	Fillister-head screw for No.91-015 342-45	91-006 924-45	Knife driving shaft bracket
91-000 697-15	Hinge bolt for No.91-015 341-05	91-006 939-15	Lifting lever pin
91-000 785-15	Pin, threaded, for No.91-015 348-45 (old version)	91-006 941-05	Presser bar guide collar
91-001 511-15	Hexagon nut for No.91-000 697-15 (new version)	91-006 966-05	Knife bar
91-001 600-35	Wing nut for No.91-000 697-15 (old version)	91-006 982-25	Thread guide, lower, for No.91-015 363-91
		91-015 308-45	Knife holder (up to 6.5 mm trimming margin)
		91-015 318-04	x Model Feed dog
		91-015 322-04	x S x Model Presser foot for No.91-015 328-03

8. Parts of Previous Pfaff 34 Machines

- (*91-006 155-15) 91-002 148-15 Spring washer for No.91-002 279-15
- (*91-015 664-05) 91-002 164-05 Center stud (point = 60°)
- (*91-000 406-15) 91-002 279-15 Dowel pin for No.91-002 504-45
- (*91-018 357-45) 91-006 158-35 Oil cup for No.91-009 107-05
- (*91-008 522-05) 91-009 107-05 Arm shaft bushing, front

Parts of Previous Pfaff 34-31 Machines

S = Trimming margin

- 91-015 323-05 Knife, w/ 8.7 mm-wide cutting edge
for No.91-015 308-45
- 91-015 328-03 x S x Model
Needle plate, w/ cutting insert, complete,
consisting of:
No.91-000 730-35 Fillister-head screw
No.91-015 319-05 Needle plate
No.91-015 320-04 x S Needle plate insert, w/
cutting insert
No.91-015 321-04 x Model
Knife follower
- 91-015 339-05 Arm shaft bushing, front
- 91-015 340-05 Knife driving eccentric for No.15361
- 91-015 341-05 Knife driving eccentric connection
for No.15361
- 91-015 342-45 Knife driving shaft crank, rear, adjustable,
for No.15361
- 91-015 343-05 Knife driving shaft for No.15361
- 91-015 345-45 Knife holder (exceeding 6.5 mm trimming margin)
- 91-015 347-05 Needle bar bushing, upper,
for No.91-715 346-02
- 91-015 348-45 Needle bar connecting stud for No.91-715 346-02
- 91-015 353-35 Cover
- 91-015 363-91 Face plate, complete,
consisting of Nos.91-000 082-35; 91-000 091-35;
91-004 531-35; 91-006 502-35; 91-006 884-25;
91-006 901-45; 91-006 982-25
- 91-015 371-91 Knife driving shaft crank, complete,
consisting of Nos.1894; 91-000 377-15; 91-001 686-15;
91-006 915-45; 91-006 916-05; 91-006 917-05;
91-006 918-05; 91-015 343-05
- 91-028 024-15 Washer for No.91-001 511-15
- 91-715 346-02 Needle bar

Numerical Index

Nummern-Verzeichnis / Tableau des numéros / Numerical Index / Lista de números

Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.
+ 1 894	8.	13-050 094-15	2.	91-000 152-15	6.	91-000 367-15	3.	91-000 672-15	2.
+ 1 933	8.	13-052 256-15	4.1.	91-000 153-15	1.	91-000 367-15	4.1.	91-000 687-15	3.
+ 15 349	8.	13-060 400-05	3.	91-000 153-15	4.1.	+91-000 377-15	8.	+91-000 697-15	8.
+ 15 361	8.	40-666 200-04	7.	+91-000 153-15	8.	91-000 380-35	6.	91-000 717-15	5.
11-108 225-15	3.	91-000 011-15	2.	91-000 172-35	2.	91-000 380-35	7.	91-000 737-05	4.3.
11-108 240-15	4.2.	91-000 029-15	4.1.	91-000 173-35	3.	91-000 382-15	7.	91-000 740-15	2.
11-108 246-15	4.2.	91-000 047-15	6.	91-000 186-15	4.3.	91-000 388-15	4.3.	91-000 783-15	2.
11-130 170-15	7.	91-000 056-15	3.	91-000 191-15	6.	91-000 388-15	6.	91-000 785-15	6.
11-130 548-15	3.	+91-000 056-15	8.	91-000 221-15	6.	91-000 392-15	1.	+91-000 785-15	8.
11-173 090-15	7.	91-000 058-15	2.	91-000 237-25	4.3.	91-000 401-15	2.	91-000 807-15	2.
11-173 225-15	5.	91-000 062-25	4.3.	91-000 239-15	4.3.	91-000 401-35	4.3.	91-001 109-15	1.
11-174 086-15	7.	91-000 064-15	2.	91-000 243-15	1.	+91-000 402-15	8.	91-001 143-15	1.
+11-174 086-15	8.	91-000 073-35	1.	+91-000 243-15	8.	91-000 406-15	2.	+91-001 511-15	8.
11-460 109-15	4.3.	91-000 074-15	6.	91-000 245-15	6.	91-000 407-15	3.	91-001 512-15	2.
11-460 247-25	4.3.	91-000 074-35	4.3.	91-000 250-15	3.	+91-000 407-25	8.	91-001 512-15	3.
11-460 250-25	4.1.	91-000 078-15	4.1.	91-000 256-15	1.	91-000 409-15	5.	91-001 512-15	5.
11-460 355-15	4.3.	91-000 080-15	6.	91-000 284-15	1.	91-000 410-15	1.	91-001 513-05	4.1.
11-470 364-25	4.3.	91-000 082-25	4.3.	91-000 290-15	3.	91-000 410-15	5.	91-001 522-35	1.
11-470 768-15	4.2.	91-000 082-35	4.3.	91-000 298-05	2.	91-000 410-15	7.	91-001 522-35	7.
11-505 289-25	6.	+91-000 082-35	8.	91-000 298-05	5.	91-000 412-35	7.	91-001 533-25	4.3.
12-024 171-15	4.2.	+91-000 083-15	8.	+91-000 298-05	8.	+91-000 442-35	8.	91-001 536-15	3.
12-305 064-25	6.	91-000 083-35	2.	91-000 321-15	2.	+91-000 445-15	8.	91-001 538-15	2.
12-305 414-15	4.2.	91-000 087-35	1.	91-000 323-15	2.	91-000 456-15	2.	91-001 540-15	6.
12-611 310-45	4.2.	91-000 091-35	6.	91-000 340-15	2.	91-000 503-15	3.	91-001 547-15	6.
12-640 050-55	5.	+91-000 091-35	8.	91-000 359-15	4.3.	+91-000 543-15	8.	91-001 593-35	2.
12-640 170-55	4.1.	91-000 094-25	6.	91-000 363-25	3.	+91-000 560-15	8.	+91-001 600-35	8.
12-640 170-55	7.	91-000 094-35	3.	91-000 363-25	4.3.	91-000 589-15	3.	+91-001 686-15	8.
12-642 170-45	4.1.	91-000 112-25	4.1.	91-000 364-25	4.3.	91-000 598-15	3.	91-001 954-05	2.
12-642 170-45	4.3.	91-000 139-15	3.	91-000 366-15	7.	91-000 624-15	1.	91-002 008-15	1.
13-030 095-05	2.	91-000 150-15	2.	91-000 366-25	4.3.	91-000 624-15	7.	91-002 030-05	3.
13-030 098-05	7.	91-000 150-15	5.	91-000 367-15	1.	91-000 666-05	7.	+91-002 044-05	8.
13-030 341-05	4.2.	91-000 152-15	1.	91-000 367-15	2.	91-000 668-15	7.	91-002 047-05	3.

Nummern-Verzeichnis / Tableau des numéros / Numerical Index / Lista de números									
Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.
91-002 048-05	3.	91-004 173-15	7.	91-006 401-45	7.	91-006 548-35	1.	91-006 694-05	3.
91-002 050-25	3.	91-004 178-91	1.	91-006 402-91	7.	91-006 549-45	2.	91-006 698-05	6.
91-002 065-05	1.	91-004 179-45	1.	91-006 403-05	7.	91-006 553-35	2.	91-006 705-92	2.
91-002 065-05	7.	91-004 181-05	3.	91-006 404-91	2.	91-006 556-35	3.	91-006 710-05	2.
91-002 134-05	3.	91-004 182-91	7.	91-006 405-92	2.	91-006 560-05	3.	91-006 711-25	3.
+91-002 148-15	8.	91-004 183-45	7.	91-006 407-91	7.	91-006 570-15	3.	91-006 740-91	3.
91-002 158-15	1.	91-004 184-45	7.	91-006 414-91	3.	91-006 571-05	3.	91-006 744-91	3.
+91-002 164-05	8.	91-004 185-45	3.	91-006 414-91	7.	91-006 572-92	3.	91-006 746-91	3.
91-002 170-05	1.	91-004 186-45	3.	91-006 415-91	3.	91-006 574-05	3.	91-006 758-15	1.
91-002 177-35	2.	91-004 187-91	1.	91-006 416-25	3.	91-006 576-92	3.	91-006 759-05	2.
91-002 203-05	4.3.	91-004 188-05	1.	91-006 501-45	6.	91-006 584-05	1.	91-006 764-91	3.
91-002 204-35	4.3.	91-004 197-91	1.	91-006 502-35	1.	91-006 589-25	4.3.	91-006 770-92	1.
91-002 205-25	4.3.	+91-004 531-35	8.	91-006 502-35	6.	91-006 590-05	4.3.	91-006 772-01	1.
91-002 264-05	3.	91-004 705-05	1.	+91-006 502-35	8.	91-006 591-25	4.3.	91-006 773-05	1.
+91-002 279-15	8.	91-004 722-05	1.	91-006 511-35	1.	91-006 595-25	4.3.	91-006 775-01	1.
91-002 504-45	2.	91-005 005-05	4.3.	91-006 513-05	1.	91-006 596-91	4.3.	91-006 779-01	1.
91-002 536-05	4.1.	91-005 068-05	2.	91-006 514-05	1.	91-006 601-05	3.	91-006 781-91	1.
91-002 536-15	4.3.	91-005 070-05	2.	91-006 516-92	1.	91-006 611-35	1.	91-006 784-25	3.
91-002 571-05	2.	91-005 125-05	4.3.	91-006 517-05	1.	91-006 615-05	2.	91-006 785-25	3.
91-002 844-05	2.	91-005 535-05	1.	91-006 518-05	1.	91-006 615-05	3.	91-006 793-91	2.
91-002 845-35	2.	91-005 544-05	1.	91-006 519-05	2.	91-006 616-05	1.	91-006 794-91	3.
91-002 846-35	6.	91-005 544-05	2.	91-006 520-05	1.	91-006 623-45	2.	91-006 801-45	2.
91-002 848-15	2.	91-005 564-45	4.3.	91-006 521-45	1.	91-006 625-45	2.	91-006 803-45	3.
91-004 159-91	3.	91-005 567-25	4.3.	91-006 523-05	1.	91-006 632-05	1.	91-006 804-45	3.
91-004 168-91	4.1.	91-005 568-25	4.3.	91-006 524-92	1.	91-006 633-05	1.	91-006 813-15	1.
91-004 169-45	4.1.	91-005 569-25	4.3.	91-006 525-05	1.	91-006 638-25	1.	91-006 814-05	1.
91-004 170-45	4.1.	91-005 608-25	4.3.	91-006 526-15	1.	91-006 638-25	6.	91-006 815-91	1.
91-004 171-15	4.1.	91-005 609-05	4.3.	91-006 533-92	2.	91-006 639-25	1.	91-006 818-05	1.
91-004 171-15	7.	91-005 622-15	4.3.	91-006 535-05	2.	91-006 639-25	6.	91-006 820-25	1.
91-004 172-05	4.1.	91-005 673-05	3.	91-006 536-92	2.	91-006 640-25	1.	91-006 820-25	6.
91-004 172-05	7.	91-006 155-15	2.	91-006 539-93	2.	91-006 640-25	6.	91-006 840-45	6.
91-004 173-15	4.1.	+91-006 158-35	8.	91-006 542-92	2.	91-006 644-05	3.	91-006 841-05	6.

Nummern-Verzeichnis / Tableau des numéros / Numerical Index / Lista de números									
Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.
91-006 843-91	3.	91-008 564-05	5.	91-010 937-05	7.	91-025 169-92	4.3.	91-029 007-91	4.1.
91-006 844-01	3.	91-008 618-05	1.	+91-015 308-45	8.	91-025 170-15	4.3.	91-029 030-45	2.
91-006 847-91	3.	91-008 627-05	7.	+91-015 318-04	8.	91-025 182-15	4.1.	91-029 086-15	6.
91-006 848-05	3.	91-008 651-05	7.	+91-015 322-04	8.	91-025 186-45	4.1.	91-029 450-35	4.2.
91-006 849-05	3.	91-008 874-31	7.	+91-015 323-05	8.	91-025 187-15	4.1.	91-029 480-91	4.1.
91-006 882-92	5.	91-008 940-05	6.	+91-015 328-03	8.	91-025 194-91	4.1.	91-029 518-55	4.3.
91-006 883-05	5.	91-009 035-35	1.	+91-015 339-05	8.	91-025 212-05	6.	91-029 601-25	4.1.
+91-006 884-25	8.	+91-009 107-05	8.	+91-015 340-05	8.	91-025 260-05	6.	91-029 601-25	4.3.
91-006 885-92	2.	91-009 144-15	2.	+91-015 341-05	8.	91-027 271-92	4.3.	91-029 692-45	4.3.
91-006 891-91	3.	91-009 148-05	2.	+91-015 342-45	8.	91-025 351-05	6.	91-029 831-91	4.1.
91-006 892-05	3.	91-009 149-05	3.	+91-015 343-05	8.	91-025 354-05	6.	91-029 833-45	4.1.
91-006 896-92	2.	91-009 153-91	6.	+91-015 345-45	8.	91-025 355-05	6.	91-029 840-91	4.3.
+91-006 901-45	8.	91-009 154-15	6.	+91-015 347-05	8.	91-025 356-05	6.	91-029 841-05	4.3.
+91-006 904-05	8.	91-009 155-91	2.	+91-015 348-45	8.	91-025 357-91	6.	91-029 933-91	4.2.
+91-006 905-05	8.	91-009 158-35	7.	+91-015 353-35	8.	91-025 358-05	6.	91-029 934-91	4.2.
+91-006 906-05	8.	91-009 197-35	5.	+91-015 363-91	8.	91-025 359-05	6.	91-029 946-91	4.1.
+91-006 907-05	8.	91-009 224-05	2.	+91-015 371-91	8.	91-025 365-45	6.	91-030 009-15	6.
91-006 908-05	7.	91-009 273-05	2.	91-015 652-92	7.	91-025 366-05	6.	91-030 246-15	4.1.
+91-006 908-05	8.	91-009 359-91	3.	91-015 664-05	3.	91-025 369-05	5.	91-031 568-91	4.3.
+91-006 910-35	8.	91-009 606-05	2.	91-018 079-25	3.	91-025 373-12	5.	91-032 805-91	4.2.
+91-006 915-45	8.	91-009 609-05	2.	91-018 357-45	2.	91-025 374-05	5.	91-032 806-45	4.2.
+91-006 916-05	8.	91-009 610-35	2.	91-019 676-05	2.	91-025 376-05	5.	91-032 807-91	4.2.
+91-006 917-05	8.	91-010 023-05	7.	91-022 672-05	1.	91-025 379-91	5.	91-032 808-45	4.2.
+91-006 918-05	8.	91-010 026-31	7.	91-022 672-05	2.	91-025 694-05	6.	91-032 809-45	4.2.
+91-006 924-45	8.	91-010 107-05	4.3.	91-025 054-55	4.3.	91-026 095-04	3.	91-032 828-45	4.2.
+91-006 939-15	8.	91-010 107-05	7.	91-025 056-92	4.3.	91-026 096-04	3.	91-040 019-93	6.
+91-006 941-05	8.	91-010 126-92	3.	91-025 060-92	4.3.	91-026 242-93	4.1.	91-040 207-91	6.
+91-006 966-05	8.	91-010 181-15	1.	91-025 075-55	4.3.	91-026 271-04	3.	91-040 618-45	4.3.
+91-006 982-25	8.	91-010 181-15	7.	91-025 076-15	4.3.	91-026 272-04	3.	91-040 621-91	4.3.
91-007 665-15	2.	91-010 183-05	7.	91-025 077-15	4.3.	91-026 414-93	4.1.	91-040 623-25	4.3.
91-008 468-92	5.	91-010 185-05	7.	91-025 164-05	4.1.	91-026 611-15	3.	91-041 060-45	4.3.
91-008 522-05	2.	91-010 633-05	1.	91-025 165-45	4.1.	+91-028 024-15	8.	91-041 061-45	4.3.

Nummern-Verzeichnis / Tableau des numéros / Numerical Index / Lista de números									
Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.	Nr./nº/No.	Fig.
91-041 062-25	4.3.	91-051 152-93	5.	91-067 005-05	1.	99-115 036-45	4.2.	UNITY SEWING SUPPLY CO. 824 E. 8th St. Los Angeles, CA 90021	
91-041 066-25	4.3.	91-051 155-93	5.	91-067 020-05	2.	99-115 037-45	4.2.		
91-041 067-25	4.3.	91-051 157-93	5.	91-068 076-92	2.	99-129 580-93	4.1.		
91-041 070-91	4.3.	91-051 159-93	5.	91-069 808-45	6.	99-129 584-93	7.		
91-041 075-91	4.3.	91-051 159-93	7.	91-097 074-47	4.2.				
91-042 561-25	6.	91-051 317-03	5.	91-100 076-15	3.				
91-042 969-91	6.	91-051 708-93	5.	91-100 086-15	3.				
91-043 136-41	6.	91-051 714-15	5.	91-100 213-15	1.				
91-043 138-41	6.	91-053 232-15	5.	91-101 775-05	4.2.				
91-043 142-25	6.	91-053 303-13	6.	91-101 798-05	3.				
91-043 148-21	6.	91-053 330-91	4.3.	91-105 443-15	2.				
91-043 154-05	6.	91-053 332-41	4.3.	91-105 447-15	1.				
91-043 155-92	6.	91-053 347-21	4.3.	91-105 447-15	7.				
91-043 157-91	6.	91-053 667-11	7.	91-129 207-11	2.				
91-043 159-25	6.	91-053 669-15	7.	91-129 569-91	4.1.				
91-043 160-92	6.	91-053 875-21	4.1.	91-129 637-45	4.2.				
91-043 161-92	6.	91-053 941-91	5.	91-129 640-90	4.2.				
91-046 071-04	6.	91-053 942-15	5.	91-129 641-92	4.2.				
91-046 097-25	4.3.	91-053 943-05	5.	91-129 644-05	4.2.				
91-046 276-04	7.	91-063 072-05	2.	91-129 645-45	4.2.				
91-046 397-04	5.	91-063 139-91	2.	91-129 646-92	4.2.				
91-046 398-04	5.	91-063 171-91	7.	91-129 647-45	4.2.				
91-046 682-03	1.	91-063 173-91	7.	91-129 649-45	4.2.				
91-046 861-25	1.	91-063 174-35	7.	91-129 650-90	4.2.				
91-047 106-04	5.	91-063 175-15	7.	91-129 660-90	4.2.				
91-047 359-04	7.	91-063 181-91	7.	+91-715 346-02	8.				
91-048 142-04	6.	91-063 184-15	7.	93-513 120-91	4.3.				
91-048 277-04	5.	91-063 193-35	7.	93-513 121-00	4.3.				
91-048 881-04	7.	91-064 583-05	2.	93-513 124-10	4.3.				
91-048 886-04	7.	91-064 620-15	7.	93-513 125-05	4.3.				
91-050 706-91	6.	91-064 621-05	7.	99-080 150-91	4.2.				
91-050 855-45	4.3.	91-064 624-35	7.	99-115 034-15	4.2.				

PFAFF[®]